

Manufacturer	Domain	Control device	Basis	Maintenance	Repair
<b>Audi</b>					
A3 (8V)	Airbag electronics		Read and delete DTC		
	Brake electronics		Measurements		
	Gearbox electronics		Read and delete DTC		
	Air conditioning electronics		Measurements		
	Engine electronics		Read and delete DTC		
Q2 (GA)	Airbag electronics		Measurements		
	Brake electronics		Read and delete DTC		
	Gearbox electronics		Measurements		
	Air conditioning electronics		Read and delete DTC		
	Engine electronics		Measurements		
TT (FV/8S)	Airbag electronics		Read and delete DTC		
	Brake electronics		Measurements		
	Gearbox electronics		Read and delete DTC		
	Air conditioning electronics		Measurements		
	Engine electronics		Read and delete DTC		
<b>Ford</b>					
General	Airbag electronics	UDS_RCM_9H52	Read and delete DTC		
		UDS_RCM_F2GT	Measurements		
		UDS_RCM_GBFT	Read and delete DTC		
		UDS_RCM_GJ5T	Measurements		
		UDS_RCM_H2GT	Read and delete DTC		
		UDS_RCM_J1GT_V3	Measurements		
		UDS_RCM_J1GT_V4	Read and delete DTC		
		UDS_RCM_JX7T_V2	Measurements		
		UDS_RCM_LS7T	Read and delete DTC		
		UDS_RCM_TK48	Measurements		
	Active noise suppression	Variants added			
	All-wheel electronic system	Variants added			
	Trailer electronics	Variants added			
	Audio interface	UDS_FCIM_KM2T	Read and delete DTC		
	Audio signal digital	Variants added	Measurements		
	Control panel audio	Variants added			
	Brake electronics	UDS_ABS_BCKA	Read and delete DTC		
		UDS_ABS_BH52	Measurements		
		UDS_ABS_BK31_V2	Read and delete DTC		
		UDS_ABS_D2BC	Measurements		
		UDS_ABS_DT43	Read and delete DTC		
		UDS_ABS_FB53	Measurements		
		UDS_ABS_FK21	Read and delete DTC		
		UDS_ABS_KK21	Measurements		
	DC/DC converter	UDS_DCDC_DJ4V	Read and delete DTC		
		UDS_DCDC_K2GT	Measurements		
		UDS_DCDC_KD5T	Read and delete DTC		
		Measurements			

Parking aid	Variants added	
Chassis electronics	UDS_VDM_JR3C	Read and delete DTC Measurements
	UDS_VDM_K2GC	Read and delete DTC Measurements
Remote control	UDS_RFA_BT4T	Read and delete DTC Measurements
	UDS_RFA_GRN5	Read and delete DTC Measurements
Gateway	Variants added	
Cruise control	Variants added	
Gearbox electronics	Variants added	
Body electronics 2	Variants added	
Air conditioning electronics	UDS_HVAC_6H52	Read and delete DTC Measurements
	UDS_HVAC_9L34	Read and delete DTC Measurements
	UDS_HVAC_BS7T	Read and delete DTC Measurements
	UDS_HVAC_GB5T	Read and delete DTC Measurements
	UDS_HVAC_JK2T_V2	Read and delete DTC Measurements
A/C electronics rear	Variants added	
Instrument cluster	UDS_IPC_CM5T	Read and delete DTC Measurements
	UDS_IPC_DT1T_V4	Read and delete DTC Measurements
	UDS_IPC_GB5T	Read and delete DTC Measurements
	UDS_IPC_JB3T	Read and delete DTC Measurements
	UDS_IPC_JK2T	Read and delete DTC Measurements
	UDS_IPC_JX7T_V2	Read and delete DTC Measurements
	UDS_IPC_JX7T_V3	Read and delete DTC Measurements
	UDS_IPC_KK3T	Read and delete DTC Measurements
	UDS_IPC_KS7T	Read and delete DTC Measurements
Steering wheel electronics	Variants added	
Steering angle sensor	UDS_SASM_9G9N_V2	Read and delete DTC Measurements
Media interface	Variants added	
Engine electronics	UDS_PCM_AG91_V9	Read and delete DTC Measurements
	UDS_PCM_AV41_V4	Read and delete DTC Measurements
	UDS_PCM_BG91_VB	Read and delete DTC Measurements
	UDS_PCM_BH52	Read and delete DTC Measurements
	UDS_PCM_CV11_V4	Read and delete DTC Measurements
	UDS_PCM_DN15_V4	Read and delete DTC Measurements
	UDS_PCM_DR3A_V4	Read and delete DTC Measurements
	UDS_PCM_DT4A	Read and delete DTC Measurements
	UDS_PCM_F1F1_V5	Read and delete DTC Measurements
	UDS_PCM_F1FA_V10	Read and delete DTC Measurements
	UDS_PCM_F1GA_V6	Read and delete DTC Measurements
	UDS_PCM_F1GA_V7	Read and delete DTC Measurements
	UDS_PCM_F2GA	Read and delete DTC Measurements
	UDS_PCM_F2GA_V2	Read and delete DTC Measurements
	UDS_PCM_FVGA_V2	Read and delete DTC Measurements
	UDS_PCM_FV6A_V2	Read and delete DTC Measurements
	UDS_PCM_GSGA_V2	Read and delete DTC Measurements
	UDS_PCM_GA6A	Read and delete DTC Measurements
	UDS_PCM_GB3G_V3	Read and delete DTC Measurements
	UDS_PCM_GB5A	Read and delete DTC Measurements
	UDS_PCM_GB5A_V2	Read and delete DTC Measurements

			Measurements		
		UDS_PCM_GR3A_VA	Read and delete DTC		
			Measurements		
		UDS_PCM_HF01	Read and delete DTC		
			Measurements		
		UDS_PCM_HJ5A	Read and delete DTC		
			Measurements		
		UDS_PCM_HS7A_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_J1B1	Read and delete DTC		
			Measurements		
		UDS_PCM_J1DA_V3	Read and delete DTC		
			Measurements		
		UDS_PCM_J1DA_V4	Read and delete DTC		
			Measurements		
		UDS_PCM_J1DA_V5	Read and delete DTC		
			Measurements		
		UDS_PCM_J1DA_V6	Read and delete DTC		
			Measurements		
		UDS_PCM_J1DA_V7	Read and delete DTC		
			Measurements		
		UDS_PCM_J7B5	Read and delete DTC		
			Measurements		
		UDS_PCM_JB3G	Read and delete DTC		
			Measurements		
		UDS_PCM_JB3G_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_JN15_V4	Read and delete DTC		
			Measurements		
		UDS_PCM_JN15_V5	Read and delete DTC		
			Measurements		
		UDS_PCM_JR3A_V5	Read and delete DTC		
			Measurements		
		UDS_PCM_JS7A_V5	Read and delete DTC		
			Measurements		
		UDS_PCM_JT71	Read and delete DTC		
			Measurements		
		UDS_PCM_JX6A_V4	Read and delete DTC		
			Measurements		
		UDS_PCM_JX7A_V3	Read and delete DTC		
			Measurements		
		UDS_PCM_K1GA_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_K2GA	Read and delete DTC		
			Measurements		
		UDS_PCM_KK21	Read and delete DTC		
			Measurements		
		UDS_PCM_KR3A_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_KR3A_V3	Read and delete DTC		
			Measurements		
		UDS_PCM_KV41	Read and delete DTC		
			Measurements		
		UDS_PCM_L1T1	Read and delete DTC		
			Measurements		
		UDS_PCM_L845_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_P5RV	Read and delete DTC		
			Measurements		
		UDS_PCM_PAJ1	Read and delete DTC		
			Measurements		
		UDS_PCM_PEMP	Read and delete DTC		
			Measurements		
		UDS_PCM_PENC	Read and delete DTC		
			Measurements		
		UDS_PCM_PYFL	Read and delete DTC		
			Measurements		
		UDS_PCM_RF8G_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_S801	Read and delete DTC		
			Measurements		
		UDS_PCM_S805	Read and delete DTC		
			Measurements		
		UDS_PCM_SH9V	Read and delete DTC		
			Measurements		
		UDS_PCM_SH9V_V2	Read and delete DTC		
			Measurements		
		UDS_PCM_SHNC	Read and delete DTC		
			Measurements		
	Radio/Navigation	UDS_ACM_DT4T	Read and delete DTC		
			Measurements		
		UDS_ACM_FT4T	Read and delete DTC		
			Measurements		
		UDS_ACM_GB5T	Read and delete DTC		
			Measurements		
		UDS_ACM_GR3T_V5	Read and delete DTC		
			Measurements		

		UDS_ACM_JK2T_V4	Read and delete DTC Measurements		
		UDS_ACM_JX71_V3	Read and delete DTC Measurements		
		UDS_ACM_KR3T	Read and delete DTC Measurements		
		UDS_ACM_L1BT	Read and delete DTC Measurements		
	Tire pressure monitoring system	Variants added			
	Headlamp electronics	UDS_HCM_AH52	Read and delete DTC Measurements		
		UDS_HCM_JX7B_V3	Read and delete DTC Measurements		
	Power steering	UDS_PSCM_BCKA	Read and delete DTC Measurements		
		UDS_PSCM_H1BC_V2	Read and delete DTC Measurements		
		UDS_PSCM_HB53	Read and delete DTC Measurements		
		UDS_PSCM_K2GC	Read and delete DTC Measurements		
		UDS_PSCM_KK21	Read and delete DTC Measurements		
	Passenger detection	Variants added			
	Seat ventilation	Variants added			
	Seat electronics front left	UDS_DSM_GU5T	Read and delete DTC Measurements		
	Voice control	UDS_SPRM_8M5T_V3	Read and delete DTC Measurements		
	Start/stop system	Variants added			
	Blind spot assistant left	Variants added			
	Blind spot assistant right	Variants added			
	Door electronics front left	UDS_DDM_BCKA	Read and delete DTC Measurements		
		UDS_DDM_H1BT_V4	Read and delete DTC Measurements		
	Door electronics front right	UDS_PDM_BCKA	Read and delete DTC Measurements		
		UDS_PDM_H1BT_V4	Read and delete DTC Measurements		
	Central electronics	UDS_BCMii_BCKA	Read and delete DTC Measurements		
		UDS_BCMii_BG9T	Read and delete DTC Measurements		
		UDS_BCMii_BK2T	Read and delete DTC Measurements		
		UDS_BCMii_BK2T_VA	Read and delete DTC Measurements		
		UDS_BCMii_DN1T_V4	Read and delete DTC Measurements		
		UDS_BCMii_DV6T_VD	Read and delete DTC Measurements		
		UDS_BCMii_EC3T	Read and delete DTC Measurements		
		UDS_BCMii_GV6T_VB	Read and delete DTC Measurements		
		UDS_BCMii_LU5T_V2	Read and delete DTC Measurements		
		UDS_BCMii_LU5T_V3	Read and delete DTC Measurements		
		UDS_BCMii_LU5T_V4	Read and delete DTC Measurements		
		UDS_BCMii_LU5T_V5	Read and delete DTC Measurements		
		Auxiliary heating	UDS_AHCM_BK21	Read and delete DTC Measurements	
	Auxiliary instrument	Variants added			
<b>VW</b>					
Arteon	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Bus / Transporter T6 (SG)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		

	Engine electronics		Read and delete DTC Measurements		
Passat (3G/B8)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Polo 6 (AW)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
T-Roc (A1)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		

Copyright © 2021 AVL DiTEST GMBH, all rights reserved.