

Manufacturer	Domain	Control device	Basis	Maintenance	Repair
Dacia					
Duster	Radio electronics	11077	Read and delete DTC Measurements		
		11398	Read and delete DTC Measurements		
		11650	Read and delete DTC Measurements		
		11702	Read and delete DTC Measurements		
Duster II	Radio electronics	11077	Read and delete DTC Measurements		
		11398	Read and delete DTC Measurements		
		11650	Read and delete DTC Measurements		
		11702	Read and delete DTC Measurements		
Lodgy	Radio electronics	11077	Read and delete DTC Measurements		
		11398	Read and delete DTC Measurements		
		11650	Read and delete DTC Measurements		
		11702	Read and delete DTC Measurements		
Logan II	Radio electronics	11077	Read and delete DTC Measurements		
		11398	Read and delete DTC Measurements		
		11650	Read and delete DTC Measurements		
		11702	Read and delete DTC Measurements		
Sandero II	Radio electronics	11077	Read and delete DTC Measurements		
		11398	Read and delete DTC Measurements		
		11650	Read and delete DTC Measurements		
		11702	Read and delete DTC Measurements		
Ford					
Focus III	Top functions			Program battery (manual)	
Galaxy II	Top functions			Program battery (manual)	
Galaxy III	Top functions			Program battery (manual)	
Mondeo IV	Top functions			Brake pad replacement Maintenance mode	
S-Max I	Top functions			Program battery (manual)	
S-Max II	Top functions			Program battery (manual)	
				Brake pad replacement Maintenance mode	
Mercedes Benz					
A-Klasse W177	Steering column electronics	SCCM177_Kostal_0x2903	Read and delete DTC Measurements		
E-Klasse W213	Parking aid	PARKMAN213_ParkMan_006760	Read and delete DTC Measurements		
GLC X253/C253	Top functions			Brake pad replacement Maintenance mode (manual)	
M-Klasse W166	Top functions			Service reset instructions	
Sprinter W907/W910	Parking aid	PARKMAN213_ParkMan_006760	Read and delete DTC Measurements	Service reset instructions	
	Information display	DISP6_DISP6_VAN_LGE_High	Read and delete DTC Measurements		
	Steering column electronics	SCCM177_Kostal_0x2903	Read and delete DTC Measurements		
	Engine electronics	CR61NFZ_Diag_33h	Read and delete DTC Measurements		
	Radio/Navigation	HU6_High_FreshUp2_6	Read and delete DTC Measurements		
		HU6_High_FreshUp2_7	Read and delete DTC Measurements		
	Seat heating electronics front right	SHM_FL205_BR_167_R12_0203			
	Seat heating electronics front left	SHM_FR205_BR_167_R12_0203			
V-Klasse/Vito 447	Top functions			Service reset instructions	
	Battery electronics	IBS166_Variante_000002			
Opel					
Astra H	Airbag electronics	101	Read and delete DTC Measurements		
	Instrument cluster	1239	Read and delete DTC Measurements		
Astra K	Engine electronics	2922	Read and delete DTC Measurements		
Astra J	Trailer electronics	050D	Read and delete DTC Measurements		
	Engine electronics	2B25	Read and delete DTC Measurements		Actuators
Antara	A/C electronics	661C	Read and delete DTC Measurements		
	Instrument cluster	FFFFFFFF	Read and delete DTC Measurements		
Corsa E	A/C electronics	5845	Read and delete DTC Measurements		
Insignia A	Media interface	8F01	Read and delete DTC Measurements		
	Instrument cluster	0DB4	Read and delete DTC Measurements		
	Brake electronics	3480	Read and delete DTC Measurements		
Mokka	Instrument cluster	0B1B	Read and delete DTC Measurements		

	Engine electronics	292D	Read and delete DTC Measurements	
Zafira B	Engine electronics	110	Read and delete DTC Measurements	
Renault				
Captur II	Media interface	11680	Read and delete DTC Measurements	
		11757	Read and delete DTC Measurements	
Clio IV	Media interface	11680	Read and delete DTC Measurements	
		11757	Read and delete DTC Measurements	
	Radio electronics	11129	Read and delete DTC Measurements	
		11077	Read and delete DTC Measurements	
		11398	Read and delete DTC Measurements	
		11650	Read and delete DTC Measurements	
		11702	Read and delete DTC Measurements	
Espace V	Media interface	11757	Read and delete DTC Measurements	
Laguna III	Parking aid	11102	Read and delete DTC Measurements	
Master III	Electric drive motor electronics	11405	Read and delete DTC Measurements	
		11629	Read and delete DTC Measurements	
		11785	Read and delete DTC Measurements	
	High-voltage battery-charging management	11561	Read and delete DTC Measurements	
	High-voltage battery-charging management 2	11560	Read and delete DTC Measurements	
	Radio electronics	11129	Read and delete DTC Measurements	
Megane IV	Media interface	11680	Read and delete DTC Measurements	
		11757	Read and delete DTC Measurements	
	Parking aid	11102	Read and delete DTC Measurements	
Talisman	Media interface	11680	Read and delete DTC Measurements	
		11757	Read and delete DTC Measurements	
Trafic III	Parking aid	11102	Read and delete DTC Measurements	
	Radio electronics	11129	Read and delete DTC Measurements	
Twingo III	Radio electronics	11129	Read and delete DTC Measurements	
Zoe	Drive train electronics	11404	Read and delete DTC Measurements	
		11820	Read and delete DTC Measurements	
		11167	Read and delete DTC Measurements	
	Battery electronics	11133	Read and delete DTC Measurements	
		11394	Read and delete DTC Measurements	
		11412	Read and delete DTC Measurements	
	Parking aid	11102	Read and delete DTC Measurements	
	Electric drive motor electronics	11405	Read and delete DTC Measurements	
		11629	Read and delete DTC Measurements	
		11630	Read and delete DTC Measurements	
		11785	Read and delete DTC Measurements	
		11786	Read and delete DTC Measurements	
	High-voltage battery-charging management	11132	Read and delete DTC Measurements	
		11359	Read and delete DTC Measurements	
		11533	Read and delete DTC Measurements	
		11561	Read and delete DTC Measurements	
		11821	Read and delete DTC Measurements	
	High-voltage battery-charging management 2	11221	Read and delete DTC Measurements	
		11372	Read and delete DTC Measurements	
		11534	Read and delete DTC Measurements	
		11560	Read and delete DTC Measurements	
		11822	Read and delete DTC Measurements	
	Instrument cluster	11142	Read and delete DTC Measurements	
		11381	Read and delete DTC Measurements	
		11402	Read and delete DTC Measurements	

			Measurements		
	Communication electronics	11326	Read and delete DTC		
			Measurements		
	Media interface	11757	Read and delete DTC		
			Measurements		
	Radio electronics	11129	Read and delete DTC		
			Measurements		
		11077	Read and delete DTC		
			Measurements		
		11398	Read and delete DTC		
			Measurements		
		11650	Read and delete DTC		
			Measurements		
		11702	Read and delete DTC		
			Measurements		
	Regenerative brake electronics	11095	Read and delete DTC		
			Measurements		

Copyright © 2020 AVL DITEST GMBH, all rights reserved.