

Manufacturer	Domain	Control	Basis	Maintenance	Repair
<b>Audi</b>					
A4 (8W)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
A5 (F5)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Q5 (FY)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
<b>Ford</b>					
Focus IV	Airbag electronics		Read and delete DTC Measurements		
	Audio interface		Read and delete DTC Measurements		
	Audio signal digital		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Parking aid		Read and delete DTC Measurements		
	Gateway		Read and delete DTC Measurements		
	Cruise control		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Head-up display		Read and delete DTC Measurements		
	Tailgate electronics		Read and delete DTC Measurements		
	Inductive Battery charging electronics		Read and delete DTC Measurements		
	Information display		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Instrument cluster		Read and delete DTC Measurements		
	Steering wheel electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
	Radio electronics		Read and delete DTC Measurements		
	Headlamp electronics		Read and delete DTC Measurements		
	Power steering		Read and delete DTC Measurements		
	Telematics		Read and delete DTC Measurements		
	Blind spot assist left		Read and delete DTC Measurements		
	Blind spot assist right		Read and delete DTC Measurements		
	Door electronics front left		Read and delete DTC Measurements		
Door electronics front right		Read and delete DTC Measurements			
Selector lever module		Read and delete DTC Measurements			
Central electronics		Read and delete DTC Measurements			
<b>Renault</b>					
Megane IV	Engine electronics	UDS	DTC environment data		
	Engine electronics	SID310 11505			Diesel particle filter regeneration
	Engine electronics	SID310 11505			Replace Diesel particle filter

	Engine electronics	SID310 11507			Diesel particle filter regeneration
	Engine electronics	SID310 11507			Replace Diesel particle filter
<b>Skoda</b>					
Karoq (NU)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Kodiaq (NS)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Oktavia (5E)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
<b>VW</b>					
Golf VII (AU)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Golf Sportsvan (AU)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Tiguan (AD)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		
	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		
Touran (5T)	Airbag electronics		Read and delete DTC Measurements		
	Brake electronics		Read and delete DTC Measurements		
	Gearbox electronics		Read and delete DTC Measurements		

	Air conditioning electronics		Read and delete DTC Measurements		
	Engine electronics		Read and delete DTC Measurements		

Copyright © 2020 AVL DiTEST GMBH, all rights reserved.