

Manufacturer	Domain	Control device	Basis	Maintenance	Repair
<b>Audi</b>					
A1 (8X)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
A1 (GB)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Reset inspection	
				Reset oil change interval	
	Airbag electronics		Read and delete DTC		
	Actuator, outside noise		Read and delete DTC		
	Actuator, structure-borne sound		Read and delete DTC		
	Trailer control unit		Read and delete DTC		
	Brake / parking brake		Read and delete DTC		
	Distance control		Read and delete DTC		
	Parking aid		Read and delete DTC		
	Electric roof operation		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Main beam assistant		Read and delete DTC		
	Front sensor for driver assistance systems		Read and delete DTC		
	Gateway		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Information electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Steering aid		Read and delete DTC		
	Steering column electronics		Read and delete DTC		
	Steering column lock		Read and delete DTC		
	Headlight range adjustment		Read and delete DTC		
	Engine electronics		Read and delete DTC		
	Emergency call module		Read and delete DTC		
	Tyre pressure monitoring		Read and delete DTC		
	Reversing camera system		Read and delete DTC		
	Driver side seat adjustment		Read and delete DTC		
	Sound system		Read and delete DTC		
	Lane change assistant		Read and delete DTC		
	Passenger-door electronics		Read and delete DTC		
	Driver-door electronics		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
Door electronics, rear right		Read and delete DTC			
Auxiliary/independent heater		Read and delete DTC			
Access and start authorisation		Read and delete DTC			
A3 (8V)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
				Program battery	
A4 (8K)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
A4 (8W)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Basic setting of Matrix LED	
				Retract parking brake	
				Program battery	
A5 (8T)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
A5 (F5)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
				Reset inspection	
				Reset oil change interval	
	Airbag electronics		Read and delete DTC		
	Actuator, outside noise		Read and delete DTC		
	Actuator, structure-borne sound		Read and delete DTC		
	All-wheel electronic system		Read and delete DTC		
	Trailer control unit		Read and delete DTC		
	Brake / parking brake		Read and delete DTC		
	Distance control		Read and delete DTC		
	Parking aid		Read and delete DTC		
	Electric roof operation		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Main beam assistant		Read and delete DTC		

	Front sensor for driver assistance systems		Read and delete DTC		
	Gateway		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Head-up display		Read and delete DTC		
	Rear cover electronics		Read and delete DTC		
	Information electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Steering aid		Read and delete DTC		
	Steering column electronics		Read and delete DTC		
	Steering column lock		Read and delete DTC		
	Headlight range adjustment		Read and delete DTC		
	Engine electronics		Read and delete DTC		
	Emergency call module		Read and delete DTC		
	Tyre pressure monitoring		Read and delete DTC		
	Reversing camera system		Read and delete DTC		
	Driver side seat adjustment		Read and delete DTC		
	Sound system		Read and delete DTC		
	Lane change assistant		Read and delete DTC		
	Passenger-door electronics		Read and delete DTC		
	Driver-door electronics		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Auxiliary/independent heater		Read and delete DTC		
	Access and start authorisation		Read and delete DTC		
A6 (4G)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Basic setting of Matrix LED	
				Program battery	
A6 (F2)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
				Reset inspection	
				Reset oil change interval	
	Airbag electronics		Read and delete DTC		
	Actuator, outside noise		Read and delete DTC		
	Actuator, structure-borne sound		Read and delete DTC		
	All-wheel electronic system		Read and delete DTC		
	Trailer control unit		Read and delete DTC		
	Brake / parking brake		Read and delete DTC		
	Distance control		Read and delete DTC		
	Parking aid		Read and delete DTC		
	Electric roof operation		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Main beam assistant		Read and delete DTC		
	Front sensor for driver assistance systems		Read and delete DTC		
	Gateway		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Head-up display		Read and delete DTC		
	Rear cover electronics		Read and delete DTC		
	Information electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Steering aid		Read and delete DTC		
	Steering column electronics		Read and delete DTC		
	Steering column lock		Read and delete DTC		
	Headlight range adjustment		Read and delete DTC		
	Engine electronics		Read and delete DTC		
	Emergency call module		Read and delete DTC		
	Tyre pressure monitoring		Read and delete DTC		
	Reversing camera system		Read and delete DTC		
	Driver side seat adjustment		Read and delete DTC		
	Sound system		Read and delete DTC		
	Lane change assistant		Read and delete DTC		
	Passenger-door electronics		Read and delete DTC		
	Driver-door electronics		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Auxiliary/independent heater		Read and delete DTC		
	Access and start authorisation		Read and delete DTC		
A7 (4G)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
A7 (F2)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	

				Reset inspection
				Reset oil change interval
	Airbag electronics		Read and delete DTC	
	Actuator, outside noise		Read and delete DTC	
	Actuator, structure-borne sound		Read and delete DTC	
	All-wheel electronic system		Read and delete DTC	
	Trailer control unit		Read and delete DTC	
	Brake / parking brake		Read and delete DTC	
	Distance control		Read and delete DTC	
	Parking aid		Read and delete DTC	
	Electric roof operation		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Main beam assistant		Read and delete DTC	
	Front sensor for driver assistance systems		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Head-up display		Read and delete DTC	
	Rear cover electronics		Read and delete DTC	
	Information electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Steering aid		Read and delete DTC	
	Steering column electronics		Read and delete DTC	
	Steering column lock		Read and delete DTC	
	Headlight range adjustment		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Emergency call module		Read and delete DTC	
	Tyre pressure monitoring		Read and delete DTC	
	Reversing camera system		Read and delete DTC	
	Driver side seat adjustment		Read and delete DTC	
	Sound system		Read and delete DTC	
	Lane change assistant		Read and delete DTC	
	Passenger-door electronics		Read and delete DTC	
	Driver-door electronics		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Auxiliary/independent heater		Read and delete DTC	
	Access and start authorisation		Read and delete DTC	
A8 (4H)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Program battery
A8 (F8)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
				Reset inspection
				Reset oil change interval
	Airbag electronics		Read and delete DTC	
	Actuator, outside noise		Read and delete DTC	
	Actuator, structure-borne sound		Read and delete DTC	
	All-wheel electronic system		Read and delete DTC	
	Trailer control unit		Read and delete DTC	
	Brake / parking brake		Read and delete DTC	
	Distance control		Read and delete DTC	
	Parking aid		Read and delete DTC	
	Electric roof operation		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Main beam assistant		Read and delete DTC	
	Front sensor for driver assistance systems		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Head-up display		Read and delete DTC	
	Rear cover electronics		Read and delete DTC	
	Information electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Steering aid		Read and delete DTC	
	Steering column electronics		Read and delete DTC	
	Steering column lock		Read and delete DTC	
	Headlight range adjustment		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Emergency call module		Read and delete DTC	
	Tyre pressure monitoring		Read and delete DTC	
	Reversing camera system		Read and delete DTC	
	Driver side seat adjustment		Read and delete DTC	
	Sound system		Read and delete DTC	

	Lane change assistant		Read and delete DTC	
	Passenger-door electronics		Read and delete DTC	
	Driver-door electronics		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Auxiliary/independent heater		Read and delete DTC	
	Access and start authorisation		Read and delete DTC	
Q2 (GA)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake
Q3 (8U)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake
Q3 (F3)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake Reset inspection Reset oil change interval
Q5 (8R)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake
Q5 (FY)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake Reset inspection Reset oil change interval
	Airbag electronics		Read and delete DTC	
	Actuator, outside noise		Read and delete DTC	
	Actuator, structure-borne sound		Read and delete DTC	
	All-wheel electronic system		Read and delete DTC	
	Trailer control unit		Read and delete DTC	
	Brake / parking brake		Read and delete DTC	
	Distance control		Read and delete DTC	
	Parking aid		Read and delete DTC	
	Electric roof operation		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Main beam assistant		Read and delete DTC	
	Front sensor for driver assistance systems		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Head-up display		Read and delete DTC	
	Rear cover electronics		Read and delete DTC	
	Information electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Steering aid		Read and delete DTC	
	Steering column electronics		Read and delete DTC	
	Steering column lock		Read and delete DTC	
	Headlight range adjustment		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Emergency call module		Read and delete DTC	
	Tyre pressure monitoring		Read and delete DTC	
	Reversing camera system		Read and delete DTC	
	Driver side seat adjustment		Read and delete DTC	
	Sound system		Read and delete DTC	
	Lane change assistant		Read and delete DTC	
	Passenger-door electronics		Read and delete DTC	
	Driver-door electronics		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Auxiliary/independent heater		Read and delete DTC	
	Access and start authorisation		Read and delete DTC	
Q7 (4L)	Top functions	UDS		Basic setting of Xenon/LED headlamps
Q7 (4M)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake Program battery
R8 (4S)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake Program battery
TT (8S)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake
<b>BMW</b>				
1er (F20/F21)	Park assist	PMA_20	Read and delete DTC	

2er (F22/F23/F87)	Park assist	PMA_20	Read and delete DTC	
2er Active Tourer / Grand Tourer (F45/F46)	Park assist	PMA_20	Read and delete DTC	
3er (F30/F31/F34/F35/F80)	Control panel roof	FZD_F15	Measurements	
			Read and delete DTC	
3er (G20/G21)	Model selection added			Service reset
	Airbag electronics		Read and delete DTC	
	Audio amplifier		Read and delete DTC	
	Battery-charging management		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Combox		Read and delete DTC	
	Park assist		Read and delete DTC	
	Electric fuel pump		Read and delete DTC	
	Electrical drive module		Read and delete DTC	
	Driver assistance system		Read and delete DTC	
	High beam electronics		Read and delete DTC	
	Control panel roof		Read and delete DTC	
	Gear selector		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Tailgate electronics		Read and delete DTC	
	Chassis electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Multi-axis acceleration sensor module		Read and delete DTC	
	Engine electronics	D83BX7C0	Read and delete DTC	
	Navigation system/radio		Read and delete DTC	
	Tyre pressure monitoring system		Read and delete DTC	
	All-round visibility camera / reversing camera		Read and delete DTC	
	Headlamp electronics, left		Read and delete DTC	
	Headlamp electronics, right		Read and delete DTC	
	Power steering		Read and delete DTC	
	Immobiliser		Read and delete DTC	
	Central control unit		Read and delete DTC	
4er (F32/F33/F36/F82/F83)	Control panel roof	FZD_F15	Measurements	
			Read and delete DTC	
5er (F07/F10/F11)	Park assist	PMA_10	Read and delete DTC	
5er (G30/G31)	Engine electronics	D83BX7C0	Read and delete DTC	
6er (F06/F12/F13)	Park assist	PMA_10	Read and delete DTC	
6er (G32)	Model selection added			Service reset
	Airbag electronics		Read and delete DTC	
	Audio amplifier		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Combox		Read and delete DTC	
	Park assist		Read and delete DTC	
	Electric fuel pump		Read and delete DTC	
	Driver assistance system		Read and delete DTC	
	High beam electronics		Read and delete DTC	
	Control panel roof		Read and delete DTC	
	Gear selector		Read and delete DTC	
	Gateway		Read and delete DTC	
	transmission electronics		Read and delete DTC	
	Tailgate electronics		Read and delete DTC	
	Chassis electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Multi-axis acceleration sensor module		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Motor electronics 2		Read and delete DTC	
	Navigation system/radio		Read and delete DTC	
	Tyre pressure monitoring system		Read and delete DTC	
	All-round visibility camera / reversing camera		Read and delete DTC	
	Steering column switch centre		Read and delete DTC	
	Headlamp electronics, left		Read and delete DTC	
	Headlamp electronics, right		Read and delete DTC	
	Power steering		Read and delete DTC	
	Immobiliser		Read and delete DTC	
	Central control unit		Read and delete DTC	
	Central electronics		Read and delete DTC	
7er (G11/G12)	Engine electronics	D83BX7C0	Read and delete DTC	
	Headlamp electronics, left	FLM01_L	Read and delete DTC	
	Headlamp electronics, right	FLM01_R	Read and delete DTC	

8er (G14/G15/G16)				Service reset	
X3 (G01)	Model selection added			Service reset	
	Airbag electronics		Read and delete DTC		
	Audio amplifier		Read and delete DTC		
	Battery-charging management		Read and delete DTC		
	Brake electronics		Read and delete DTC		
	Combox		Read and delete DTC		
	Park assist		Read and delete DTC		
	Electric fuel pump		Read and delete DTC		
	Electrical drive module		Read and delete DTC		
	Driver assistance system		Read and delete DTC		
	High beam electronics		Read and delete DTC		
	Control panel roof		Read and delete DTC		
	Gear selector		Read and delete DTC		
	Gateway		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Tailgate electronics		Read and delete DTC		
	Chassis electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Multi-axis acceleration sensor module		Read and delete DTC		
	Engine electronics	D83BX7C0	Read and delete DTC		
	Navigation system/radio		Read and delete DTC		
	Tyre pressure monitoring system		Read and delete DTC		
	All-round visibility camera / reversing camera		Read and delete DTC		
	Headlamp electronics, left		Read and delete DTC		
	Headlamp electronics, right		Read and delete DTC		
	Power steering		Read and delete DTC		
	Immobiliser		Read and delete DTC		
	Central control unit		Read and delete DTC		
	X4 (G02)	Model selection added			Service reset
		Airbag electronics		Read and delete DTC	
Audio amplifier			Read and delete DTC		
Brake electronics			Read and delete DTC		
Combox			Read and delete DTC		
Park assist			Read and delete DTC		
Electric fuel pump			Read and delete DTC		
Driver assistance system			Read and delete DTC		
High beam electronics			Read and delete DTC		
Control panel roof			Read and delete DTC		
Gear selector			Read and delete DTC		
Gateway			Read and delete DTC		
Gearbox electronics			Read and delete DTC		
Tailgate electronics			Read and delete DTC		
Chassis electronics			Read and delete DTC		
Air conditioning electronics			Read and delete DTC		
Instrument cluster			Read and delete DTC		
Multi-axis acceleration sensor module			Read and delete DTC		
Engine electronics			Read and delete DTC		
Navigation system/radio			Read and delete DTC		
Tyre pressure monitoring system			Read and delete DTC		
All-round visibility camera / reversing camera			Read and delete DTC		
Headlamp electronics, left			Read and delete DTC		
Headlamp electronics, right			Read and delete DTC		
Power steering			Read and delete DTC		
Immobiliser			Read and delete DTC		
Central control unit			Read and delete DTC		
X5 (G05)		Model selection added			Service reset
		Airbag electronics		Read and delete DTC	
		Audio amplifier		Read and delete DTC	
		Battery-charging management		Read and delete DTC	
	Brake electronics		Read and delete DTC		
	Combox		Read and delete DTC		
	Park assist		Read and delete DTC		
	Electric fuel pump		Read and delete DTC		
	Electrical drive module		Read and delete DTC		
	Driver assistance system		Read and delete DTC		
	High beam electronics		Read and delete DTC		
	Control panel roof		Read and delete DTC		
	Gear selector		Read and delete DTC		
Gateway		Read and delete DTC			

	Gearbox electronics		Read and delete DTC	
	Tailgate electronics		Read and delete DTC	
	Chassis electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Multi-axis acceleration sensor module		Read and delete DTC	
	Engine electronics	D83BX7C0	Read and delete DTC	
	Navigation system/radio		Read and delete DTC	
	Tyre pressure monitoring system		Read and delete DTC	
	All-round visibility camera / reversing camera		Read and delete DTC	
	Headlamp electronics, left		Read and delete DTC	
	Headlamp electronics, right		Read and delete DTC	
	Power steering		Read and delete DTC	
	Immobiliser		Read and delete DTC	
	Central control unit		Read and delete DTC	
X7 (G07)	Model selection added			Service reset
	Airbag electronics		Read and delete DTC	
	Audio amplifier		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Combox		Read and delete DTC	
	Park assist		Read and delete DTC	
	Electric fuel pump		Read and delete DTC	
	Driver assistance system		Read and delete DTC	
	High beam electronics		Read and delete DTC	
	Gear selector		Read and delete DTC	
	Gateway		Read and delete DTC	
	transmission electronics		Read and delete DTC	
	Tailgate electronics		Read and delete DTC	
	Chassis electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Multi-axis acceleration sensor module		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Navigation system/radio		Read and delete DTC	
	Tyre pressure monitoring system		Read and delete DTC	
	All-round visibility camera / reversing camera		Read and delete DTC	
	Headlamp electronics, left		Read and delete DTC	
	Headlamp electronics, right		Read and delete DTC	
	Power steering		Read and delete DTC	
	Immobiliser		Read and delete DTC	
	Central control unit		Read and delete DTC	
Z4 (G29)	Model selection added			Service reset
	Airbag electronics		Read and delete DTC	
	Audio amplifier		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Combox		Read and delete DTC	
	Park assist		Read and delete DTC	
	Electric fuel pump		Read and delete DTC	
	Driver assistance system		Read and delete DTC	
	High beam electronics		Read and delete DTC	
	Control panel roof		Read and delete DTC	
	Gear selector		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Chassis electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Multi-axis acceleration sensor module		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Navigation system/radio		Read and delete DTC	
	Tyre pressure monitoring system		Read and delete DTC	
	All-round visibility camera / reversing camera		Read and delete DTC	
	Headlamp electronics, left		Read and delete DTC	
	Headlamp electronics, right		Read and delete DTC	
	Power steering		Read and delete DTC	
	Immobiliser		Read and delete DTC	
	Central control unit		Read and delete DTC	
i3 (I01)	Headlamp electronics, left	FLE_L	Read and delete DTC	
	Headlamp electronics, right	FLE_R	Read and delete DTC	

i8 (I12)	Park assist	PMA_15	Read and delete DTC			
	Headlamp electronics, left	FLE_L	Read and delete DTC			
	Headlamp electronics, right	FLE_R	Read and delete DTC			
<b>Dacia</b>						
Dokker	Engine electronics	EDC17-C84	Read and delete DTC			
		SID-310	Measurements			
		EMS-3155 EMS-3160				
Duster 1	Gearbox electronics	11578	Read and delete DTC			
		11542	Measurements			
	Engine electronics	EDC17-C84	Read and delete DTC			
Duster 2	Gearbox electronics	11578	Read and delete DTC			
		11542	Measurements			
	Engine electronics	EDC17-C84	Read and delete DTC			
		SID-310	Measurements			
		EMS-3155 EMS-3160 MDG1				
Logan 2	Gearbox electronics	11542	Read and delete DTC			
	Engine electronics	EDC17-C84	Read and delete DTC			
Lodgy	Engine electronics	EDC17-C84	Read and delete DTC			
		SID-310	Measurements			
		EMS-3155				
		EMS-3160 MDG1				
Sandero 2	Gearbox electronics	11542	Read and delete DTC			
	Engine electronics	EDC17-C84	Read and delete DTC			
<b>Ford</b>						
General	Airbag electronics	Model selection added				
	All-wheel electronic system	Model selection added				
	Trailer electronics	Model selection added				
	Audio / radio	Model selection added				
	Audio module C	Model selection added				
	Door electronics, front right	Model selection added				
	Brake electronics	Model selection added				
	Digital satellite receiver	Model selection added				
	Digital audio signal module	Model selection added				
	Parking aid	Model selection added				
	Driving dynamics control unit	Model selection added				
	Door electronics front left	Model selection added				
	Remote control	Model selection added				
	Front control display	Model selection added				
	Cruise control system	Model selection added				
	Gearbox electronics	Model selection added				
	Body electronics B	Model selection added				
	Air conditioning electronics	Model selection added				
	Air conditioning rear	Model selection added				
	Instrument cluster	Model selection added				
	Coolant heating module	Model selection added				
	Steering angle sensor	Model selection added				
	Engine electronics	Model selection added				
	Multifunction steering wheel	Model selection added				
	Message centre	Model selection added				
	Tyre pressure monitoring	Model selection added				
	Headlamp electronics A	Model selection added				
	Interface module for entertainment	Model selection added				
	Interface module front control unit	Model selection added				
	Power steering	Model selection added				
	Start/stop system	Model selection added				
	Blind spot assistant left	Model selection added				
	Blind spot assistant right	Model selection added				
	Central electronics	Model selection added				
	<b>Hyundai</b>					
	Accent (RB)	Engine electronics		Read and delete DTC		
Brake electronics			Read and delete DTC			
Gearbox electronics			Read and delete DTC			
Airbag electronics			Read and delete DTC			
Power steering			Read and delete DTC			
Air conditioning electronics			Read and delete DTC			
Central electronics			Read and delete DTC			



Elantra (MD)	Engine electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Power steering		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	Central electronics		Read and delete DTC			
	Parking aid		Read and delete DTC			
	Parking brake		Read and delete DTC			
	Tyre pressure monitoring system		Read and delete DTC			
	Headlamp electronics		Read and delete DTC			
Santa Fe (DM)	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Parking brake		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	All-wheel electronic system		Read and delete DTC			
	Power steering		Read and delete DTC			
	Tyre pressure monitoring system		Read and delete DTC			
		Parking aid		Read and delete DTC		
	Headlamp electronics		Read and delete DTC			
	Central electronics		Read and delete DTC			
	Instrument cluster		Read and delete DTC			
i10 (PA)	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
i10 (IA)	Top functions			Service reset instructions		
	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	Power steering		Read and delete DTC			
	Tyre pressure monitoring system		Read and delete DTC			
		Central electronics		Read and delete DTC		
		Instrument cluster		Read and delete DTC		
i20 (PB)	Top functions			Service reset instructions		
	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	Power steering		Read and delete DTC			
	Central electronics		Read and delete DTC			
i20 (IB)	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	Power steering		Read and delete DTC			
	Central electronics		Read and delete DTC			
	Instrument cluster		Read and delete DTC			
i20 (GB)	Top functions			Service reset instructions		
	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	Power steering		Read and delete DTC			
	Tyre pressure monitoring system		Read and delete DTC			
	Central electronics		Read and delete DTC			
ix20 (JC)	Top functions			Service reset instructions		
	Engine electronics		Read and delete DTC			
	Gearbox electronics		Read and delete DTC			
	Brake electronics		Read and delete DTC			
	Airbag electronics		Read and delete DTC			
	Air conditioning electronics		Read and delete DTC			
	Power steering		Read and delete DTC			
	Tyre pressure monitoring system		Read and delete DTC			
	Central electronics		Read and delete DTC			
i30 (GD)	Top functions			Service reset instructions		

	Engine	GTGD	Read and delete DTC Measurements					
	Engine electronics		Read and delete DTC					
	Gearbox electronics		Read and delete DTC					
	Brake electronics		Read and delete DTC					
	Airbag electronics		Read and delete DTC					
	Air conditioning electronics		Read and delete DTC					
	Power steering		Read and delete DTC					
	Tyre pressure monitoring system		Read and delete DTC					
	Parking aid		Read and delete DTC					
	Parking brake		Read and delete DTC					
	Headlamp electronics		Read and delete DTC					
	Central electronics		Read and delete DTC					
	i30 (PD)		Top functions				Service reset instructions	
	Engine electronics		Read and delete DTC					
Gearbox electronics	Read and delete DTC							
Brake electronics	Read and delete DTC							
Airbag electronics	Read and delete DTC							
Air conditioning electronics	Read and delete DTC							
Power steering	Read and delete DTC							
Gateway	Read and delete DTC							
Instrument cluster	Read and delete DTC							
Multifunction camera	Read and delete DTC							
Parking brake	Read and delete DTC							
Reversing camera	Read and delete DTC							
Central electronics	Read and delete DTC							
i40 (VF)	Top functions		Service reset instructions					
Engine electronics	Read and delete DTC							
Gearbox electronics	Read and delete DTC							
Brake electronics	Read and delete DTC							
Airbag electronics	Read and delete DTC							
Air conditioning electronics	Read and delete DTC							
Parking brake	Read and delete DTC							
Power steering	Read and delete DTC							
Tyre pressure monitoring system	Read and delete DTC							
Central electronics	Read and delete DTC							
Parking aid	Read and delete DTC							
Headlamp electronics	Read and delete DTC							
ix35 (EL/LM)	Top functions		Service reset instructions from 2014					
Tucson (TL/TLe)	Top functions		Service reset instructions					
Engine electronics	Read and delete DTC							
Gearbox electronics	Read and delete DTC							
Brake electronics	Read and delete DTC							
Airbag electronics	Read and delete DTC							
Air conditioning electronics	Read and delete DTC							
Power steering	Read and delete DTC							
Tyre pressure monitoring system	Read and delete DTC							
Central electronics	Read and delete DTC							
Instrument cluster	Read and delete DTC							
Veloster (FS)	Top functions		Service reset instructions					
<b>Kia</b>								
Picanto (TA)	Engine electronics		Read and delete DTC					
Gearbox electronics	Read and delete DTC							
Brake electronics	Read and delete DTC							
Airbag electronics	Read and delete DTC							
Air conditioning electronics	Read and delete DTC							
Power steering	Read and delete DTC							
Central electronics	Read and delete DTC							
Picanto (JA)	Engine electronics		Read and delete DTC					
Gearbox electronics	Read and delete DTC							
Brake electronics	Read and delete DTC							
Airbag electronics	Read and delete DTC							
Air conditioning electronics	Read and delete DTC							
Power steering	Read and delete DTC							
Central electronics	Read and delete DTC							
Instrument cluster	Read and delete DTC							
Rio (UB)	Engine electronics		Read and delete DTC					
Gearbox electronics	Read and delete DTC							
Brake electronics	Read and delete DTC							
Airbag electronics	Read and delete DTC							
Air conditioning electronics	Read and delete DTC							
Power steering	Read and delete DTC							
Central electronics	Read and delete DTC							

Rio (QBR)	Engine electronics		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Airbag electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Power steering		Read and delete DTC	
	Central electronics		Read and delete DTC	
Rio (YB)	Engine electronics		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Airbag electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Power steering		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
Rio (SC)	Engine electronics		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Airbag electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Power steering		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
Ceed (JD)	Top functions			Service reset instructions
	Engine electronics		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Airbag electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Power steering		Read and delete DTC	
	Tyre pressure monitoring system		Read and delete DTC	
	Parking aid		Read and delete DTC	
	Parking brake		Read and delete DTC	
	Headlamp electronics		Read and delete DTC	
	Central electronics		Read and delete DTC	
Soul (PS)	Top functions			Service reset instructions
	Airbag electronics		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Chassis electronics		Read and delete DTC	
			Measurements	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Parking brake		Read and delete DTC	
	Tyre pressure control system		Read and delete DTC	
	Keyless entry system		Read and delete DTC	
	Power steering		Read and delete DTC	
Central electronics		Read and delete DTC		
Soul EV (PS)	Top functions			Service reset instructions
	Airbag electronics		Read and delete DTC	
	Battery electronics		Read and delete DTC	
			Measurements	
	Brake electronics		Read and delete DTC	
	DC/DC converter		Read and delete DTC	
			Measurements	
	Electric drive motor		Read and delete DTC	
			Measurements	
	high-voltage charging electronics		Read and delete DTC	
			Measurements	
	Chassis electronics		Read and delete DTC	
			Measurements	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Parking brake		Read and delete DTC	
	Tyre pressure control system		Read and delete DTC	
	Keyless entry system		Read and delete DTC	
	Power steering		Read and delete DTC	
Central electronics		Read and delete DTC		
Niro	Top functions			Service reset instructions
	Airbag electronics		Read and delete DTC	
	Brake assistant		Read and delete DTC	
	Brake electronics		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Wireless charging system		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	

	Engine electronics		Read and delete DTC		
	Multifunction camera		Read and delete DTC		
	Reversing camera		Read and delete DTC		
	Keyless start system		Read and delete DTC		
	Power steering		Read and delete DTC		
	Seat electronics		Read and delete DTC		
	Blind spot detection left		Read and delete DTC		
	Blind spot detection right		Read and delete DTC		
	Passenger door module		Read and delete DTC		
	Driver door module		Read and delete DTC		
	Central electronics		Read and delete DTC		
Sportage (SL/SLE)	Engine electronics		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Brake electronics		Read and delete DTC		
	Airbag electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Power steering		Read and delete DTC		
	Tyre pressure monitoring system		Read and delete DTC		
	Central electronics		Read and delete DTC		
Sportage (QL/QLE)	Top functions			Service reset instructions	
	Engine electronics		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Brake electronics		Read and delete DTC		
	Airbag electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Power steering		Read and delete DTC		
	Tyre pressure monitoring system		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Reversing camera		Read and delete DTC		
	Parking aid		Read and delete DTC		
	emergency brake assistant		Read and delete DTC		
	Blind spot detection left		Read and delete DTC		
	Blind spot detection right		Read and delete DTC		
	Wireless charging system		Read and delete DTC		
Sorento (UM)	Engine electronics		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Brake electronics		Read and delete DTC		
	Airbag electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Power steering		Read and delete DTC		
	Tyre pressure monitoring system		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
Optima (JF)	Engine electronics		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Brake electronics		Read and delete DTC		
	Airbag electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Power steering		Read and delete DTC		
	Tyre pressure monitoring system		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
<b>Mercedes</b>					
C-Klasse (W205)	Top functions			Service reset instructions	
	Multifunction camera	MMPC213	Read and delete DTC	Calibrate multifunction camera	
		MMPC222	Measurements		
		SMPC213			
		SMPC222			
E-Klasse (W213)	Multifunction camera	MMPC213	Read and delete DTC	Calibrate multifunction camera	
		MMPC222	Measurements		
		SMPC213			
		SMPC222			
<b>MINI</b>					
Mini Generation 3 (F54/F55/F56/F57)	Parking aid	PMA_15	Measurements		
			Read and delete DTC		
	Driver assistance system	KAFAS20	Measurements	Calibrate camera-based driver assistance system	
			Read and delete DTC		
	Navigation system/radio	CIC	Measurements		
		NBTEVO	Read and delete DTC		
		ENTRY			
	Audio amplifier	AMPHHB20	Measurements		

	Headlamp electronics, left	FLE_L	Read and delete DTC	
	Headlamp electronics, right	FLE_R	Read and delete DTC	
	Control panel roof	FZD_F15	Measurements	
			Read and delete DTC	
	Combox	TCB1	Measurements	
			Read and delete DTC	
	Special equipment system	SAS_I1	Read and delete DTC	
	All-round visibility camera / reversing camera	ICAM_F15	Measurements	
			Read and delete DTC	
	Park assist	PMA_15	Measurements	
			Read and delete DTC	
		PMA_20	Read and delete DTC	
Countrymen (F60)	All-round visibility camera / reversing camera	ICAM_F15	Measurements	
			Read and delete DTC	
	Park assist	PMA_15	Measurements	
			Read and delete DTC	
		PMA_20	Read and delete DTC	

### Mitsubishi FUSO

Canter TF	Top functions			Service reset instructions
	Airbag electronics	SRS01TF_App0103 SRS01TF_App0104	Read and delete DTC	
	Hill start assist	EZGO01TF_App0001 EZGO01TF_App0002 EZGO01TF_App0003	Read and delete DTC	
	Brake electronics	ABS_EBS01TF_0400 ABS_EBS01TF_0401 ABS_EBS01TF_0420 ABS_EBS01TF_0440 ABS_EBS01TF_0460 ABS_EBS01TF_0480 ABS_EBS01TF_0481 ABS_EBS01TF_0482	Read and delete DTC	
	Driver assistance system	VRDU02T_App0101 VRDU02T_App0102 VRDU02T_App0103 VRDU02T_App0106 VRDU02T_App0108 VRDU02T_App0201 VRDU02T_App0202 VRDU02T_App0203 VRDU02T_Boot_0101	Read and delete DTC	
	Gearbox electronics	TCM01TF_App0001 TCM01TF_App0002 TCM01TF_App0004 TCM01TF_App0005 TCM01TF_App0006 TCM01TF_App0007 TCM01TF_App0008 TCM01TF_App0009 TCM01TF_App0010	Read and delete DTC	
	Air conditioning electronics	HVAC01TF_App_0302 HVAC01TF_App_0303	Read and delete DTC	
	Instrument cluster	ICUC01TF_App_0001	Read and delete DTC	
	Headlight range adjustment	HLAL01TF_App0000_C1_Sample	Read and delete DTC	
	Engine electronics	EEC_App0200 EEC_App0201 EEC_App0202 EEC_App0205 EEC_App0206 EEC_App0207 EEC_App0208 EEC_App020A EEC_App020D EEC_App020E EEC_App020F EEC_App0210 EEC_App0212 EEC_App0213 EEC_App0214 EEC_App0215 EEC_App0216 EEC_App0217 EEC_App0218 EEC_App0219 EEC_App021A	Read and delete DTC	

		EEC_App021B			
		EEC_App021C			
		EEC_App021D			
		EEC_App021F			
		EEC_App0220			
		EEC_App0221			
		EEC_App0225			
		EEC_App0226			
		EEC_App0227			
		EEC_App0228			
		EEC_App0229			
		EEC_App022A			
		EEC_App022B			
		EEC_App0230			
		EEC_App0231			
		EEC_App0232			
	Multifunction camera	MPC01T_App_0006	Read and delete DTC		
		MPC01T_App_0007			
		MPC01T_Boot_0000			
	Radar sensor	RDF02T_App_0101	Read and delete DTC		
		RDF02T_App_0102			
		RDF02T_App_0202			
		RDF02T_App_0203			
		RDF02T_Boot_0101			
		RDF02T_Boot_0201			
	Start/stop system	ISS_MSSASteuergeraet_App0001	Read and delete DTC		
		ISS_MSSASteuergeraet_App0002			
	Immobiliser	IMMO01TF_App0001	Read and delete DTC		
		IMMO01TF_Boot_0001			
	Central electronics	SSAM01TF_App_001	Read and delete DTC		
		SSAM01TF_App_0501			
		SSAM01TF_App_0502			
		SSAM01TF_App_0503			
		SSAM01TF_Boot_0001			
Canter TF ECO	Top functions			Service reset instructions	
	Airbag electronics	SRS01TF_App0103	Read and delete DTC		
		SRS01TF_App0104			
	Hill start assist	EZGO01TF_App0001	Read and delete DTC		
		EZGO01TF_App0002			
		EZGO01TF_App0003			
	Brake electronics	ABS_EBS01TF_0400	Read and delete DTC		
		ABS_EBS01TF_0401			
		ABS_EBS01TF_0420			
		ABS_EBS01TF_0440			
		ABS_EBS01TF_0460			
		ABS_EBS01TF_0480			
		ABS_EBS01TF_0481			
		ABS_EBS01TF_0482			
	Driver assistance system	VRDU02T_App0101	Read and delete DTC		
		VRDU02T_App0102			
		VRDU02T_App0103			
		VRDU02T_App0106			
		VRDU02T_App0108			
		VRDU02T_App0201			
		VRDU02T_App0202			
		VRDU02T_App0203			
		VRDU02T_Boot_0101			
	Gearbox electronics	TCM01TF_App0001	Read and delete DTC		
		TCM01TF_App0002			
		TCM01TF_App0004			
		TCM01TF_App0005			
		TCM01TF_App0006			
		TCM01TF_App0007			
		TCM01TF_App0008			
		TCM01TF_App0009			
		TCM01TF_App0010			
	Air conditioning electronics	HVAC01TF_App_0302	Read and delete DTC		
		HVAC01TF_App_0303			
	Instrument cluster	ICUC01TF_App_0001	Read and delete DTC		
	Headlight range adjustment	HLAL01TF_App0000_C1_Sample	Read and delete DTC		
	Engine electronics	EEC_App0200	Read and delete DTC		
		EEC_App0201			
		EEC_App0202			
		EEC_App0205			

		EEC_App0206			
		EEC_App0207			
		EEC_App0208			
		EEC_App020A			
		EEC_App020D			
		EEC_App020E			
		EEC_App020F			
		EEC_App0210			
		EEC_App0212			
		EEC_App0213			
		EEC_App0214			
		EEC_App0215			
		EEC_App0216			
		EEC_App0217			
		EEC_App0218			
		EEC_App0219			
		EEC_App021A			
		EEC_App021B			
		EEC_App021C			
		EEC_App021D			
		EEC_App021F			
		EEC_App0220			
		EEC_App0221			
		EEC_App0225			
		EEC_App0226			
		EEC_App0227			
		EEC_App0228			
		EEC_App0229			
		EEC_App022A			
		EEC_App022B			
		EEC_App0230			
		EEC_App0231			
		EEC_App0232			
	Multifunction camera	MPC01T_App_0006 MPC01T_App_0007 MPC01T_Boot_0000	Read and delete DTC		
	Radar sensor	RDF02T_App_0101 RDF02T_App_0102 RDF02T_App_0202 RDF02T_App_0203 RDF02T_Boot_0101 RDF02T_Boot_0201	Read and delete DTC		
	Start/stop system	ISS_MSSASteuergeraet_App0001 ISS_MSSASteuergeraet_App0002	Read and delete DTC		
	Immobiliser	IMMO01TF_App0001 IMMO01TF_Boot_0001	Read and delete DTC		
	Central electronics	SSAM01TF_App_001 SSAM01TF_App_0501 SSAM01TF_App_0502 SSAM01TF_App_0503 SSAM01TF_Boot_0001	Read and delete DTC		
<b>Opel</b>					
Astra J	Air conditioning electronics	105	Read and delete DTC Measurements		
	Airbag electronics	103 108 109	Read and delete DTC Measurements		
	Trailer electronics	20	Read and delete DTC Measurements		
Astra H	Rear module	503	Read and delete DTC Measurements		
Astra K	Engine electronics	2923 3FA0 3F09	Read and delete DTC Measurements		
	Steering lock	601	Read and delete DTC Measurements		
	park system	1102 1201	Read and delete DTC Measurements		
	central electronics	19	Read and delete DTC Measurements		
Adam	Radio electronics	1102	Read and delete DTC Measurements		
Corsa E	Engine electronics	2154	Read and delete DTC Measurements		
Karl	Engine electronics	3D04	Read and delete DTC		

			Measurements		
	Brake electronics	3D82	Read and delete DTC		
			Measurements		
	Power steering	0D04	Read and delete DTC		
			Measurements		
Mokka A	Engine electronics	2121	Read and delete DTC		
		2100000	Measurements		
	Radio electronics	227	Read and delete DTC		
			Measurements		
Meriva B	Headlamp electronics	310	Read and delete DTC		
			Measurements		
	Headlight range adjustment	701	Read and delete DTC		
			Measurements		
Insignia A	Power steering	29	Read and delete DTC		
			Measurements		
	park system	205	Read and delete DTC		
			Measurements		
Insignia B	Engine electronics	370A	Read and delete DTC		
		3705	Measurements		
	Instrument cluster	0D1B	Read and delete DTC		
			Measurements		
	Human-machine interface	FFFF	Read and delete DTC		
			Measurements		
	Data gateway	101	Read and delete DTC		
			Measurements		
Zafira B	Rear module	503	Read and delete DTC		
			Measurements		
Zafira C	Rear module	050D	Read and delete DTC		
			Measurements		
<b>Porsche</b>					
Cayenne (536)	Model selection added				
	Distance electronics		Read and delete DTC		
	Engine mountings		Read and delete DTC		
	Airbag electronics		Read and delete DTC		
	Actuator, outside noise		Read and delete DTC		
	Actuator, structure-borne sound		Read and delete DTC		
	All-wheel electronic system		Read and delete DTC		
	Trailer electronics		Read and delete DTC		
	Brake electronics		Read and delete DTC		
	Front electronics		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Head-up display		Read and delete DTC		
	Tailgate electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Steering wheel electronics		Read and delete DTC		
	Steering column lock		Read and delete DTC		
	Engine electronics		Read and delete DTC		
	Night vision system		Read and delete DTC		
	Tyre pressure monitoring system		Read and delete DTC		
	Reversing camera		Read and delete DTC		
	Power steering		Read and delete DTC		
	Driver side seat adjustment		Read and delete DTC		
	Sound system		Read and delete DTC		
	Lane change assistant		Read and delete DTC		
	Independent heater		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Door electronics front left		Read and delete DTC		
	Door electronics, front right		Read and delete DTC		
	Selector lever module		Read and delete DTC		
	Central electronics		Read and delete DTC		
<b>Renault</b>					
Megane 4	Top functions			Service reset instructions	
	Brake electronics	11312	Read and delete DTC		
			Measurements		
	Airbag electronics	11589	Read and delete DTC		
		11292	Measurements		
	Gearbox electronics	11471	Read and delete DTC		
		11470	Measurements		
		11424			
		11542			
	Instrument cluster	11556	Read and delete DTC		
		11570	Measurements		
		11562			
		11305			



		11571			
	Air conditioning electronics	11297	Read and delete DTC Measurements		
	Engine electronics	EDC17-C84	Read and delete DTC Measurements		
		SID310	Read and delete DTC Measurements		
		EMS-3155	Read and delete DTC Measurements		
		EMS-3160	Read and delete DTC Measurements		
		M5PT	Read and delete DTC Measurements		
		MDG1	Read and delete DTC Measurements		
		ME17	Read and delete DTC Measurements		
		M5M	Read and delete DTC Measurements		
		Telematics	11237	Read and delete DTC Measurements	
	11509		Measurements		
	11549				
	11550				
	11569				
Megane 4 R.S.	Top functions			Service reset instructions	
	Engine electronics	Alle	Read and delete DTC Measurements		
Espace 5	Top functions			Service reset instructions	
	Brake electronics	11312	Read and delete DTC Measurements		
			Measurements		
	Airbag electronics	11589	Read and delete DTC Measurements		
			Measurements		
	Instrument cluster	11556	Read and delete DTC Measurements		
		11570	Measurements		
		11562			
		11305			
		11571			
	Air conditioning electronics	11297	Read and delete DTC Measurements		
	Engine electronics	M5PT	Read and delete DTC Measurements		
		MDG1	Read and delete DTC Measurements		
		M5M	Read and delete DTC Measurements		
	Telematics	11237	Read and delete DTC Measurements		
		11509	Measurements		
		11549			
		11550			
		11569			
Talisman	Top functions			Service reset instructions	
	Brake electronics	11312	Read and delete DTC Measurements		
			Measurements		
	Airbag electronics	11589	Read and delete DTC Measurements		
			Measurements		
	Gearbox electronics	11471	Read and delete DTC Measurements		
		11470	Measurements		
		11424			
	Instrument cluster	11556	Read and delete DTC Measurements		
		11570	Measurements		
		11562			
		11305			
		11571			
	Air conditioning electronics	11297	Read and delete DTC Measurements		
	Engine electronics	EDC17-C84	Read and delete DTC Measurements		
		EMS-3160	Read and delete DTC Measurements		
		M5PT	Read and delete DTC Measurements		
		ME17	Read and delete DTC Measurements		
		M5M	Read and delete DTC Measurements		
	Telematics	11237	Read and delete DTC Measurements		
		11509	Measurements		

		11549				
		11550				
		11569				
Scenic 4	Top functions				Service reset instructions	
	Brake electronics	11312	Read and delete DTC Measurements			
	Airbag electronics	11589	Read and delete DTC			
		11292	Measurements			
	Gearbox electronics	11471	Read and delete DTC			
		11470	Measurements			
	Instrument cluster	11556	Read and delete DTC			
		11570	Measurements			
		11562				
		11305				
		11571				
	Air conditioning electronics	11297	Read and delete DTC Measurements			
	Engine electronics	SID310	Read and delete DTC Measurements			
		EMS-3155	Read and delete DTC Measurements			
		EMS-3160	Read and delete DTC Measurements			
		MDG1	Read and delete DTC Measurements			
	Telematics	11237	Read and delete DTC			
		11509	Measurements			
		11549				
		11550				
11569						
Kadjar	Top functions				Service reset instructions	
	Airbag electronics	11589	Read and delete DTC			
		11292	Measurements			
	Gearbox electronics	11470	Read and delete DTC			
		11424	Measurements			
	Instrument cluster	11556	Read and delete DTC			
		11570	Measurements			
		11562				
		11305				
		11571				
	Air conditioning electronics	11297	Read and delete DTC Measurements			
	Engine electronics	EDC17-C84	Read and delete DTC Measurements			
		SID310	Read and delete DTC Measurements			
		EMS-3155	Read and delete DTC Measurements			
		EMS-3160	Read and delete DTC Measurements			
		MDG1	Read and delete DTC Measurements			
		M5M	Read and delete DTC Measurements			
	Telematics	11237	Read and delete DTC			
		11509	Measurements			
		11549				
11550						
11569						
Koleos 2	Top functions				Service reset instructions	
	Airbag electronics	11589	Read and delete DTC			
		11292	Measurements			
	Instrument cluster	11556	Read and delete DTC			
		11570	Measurements			
		11562				
		11305				
		11571				
	Air conditioning electronics	11297	Read and delete DTC Measurements			
	Engine electronics	MDG1	Read and delete DTC Measurements			
		M5M	Read and delete DTC Measurements			
	Telematics	11237	Read and delete DTC			
		11509	Measurements			
11549						
11550						

		11569			
Trafic 3	Gearbox electronics	11471	Read and delete DTC Measurements		
Captur	Gearbox electronics	11424	Read and delete DTC Measurements		
		11542	Measurements		
		11578			
	Engine electronics	SID310	Read and delete DTC Measurements		
		EMS-3155	Read and delete DTC Measurements		
Clio 4	Engine electronics	SID310	Read and delete DTC Measurements		
		EMS-3155	Read and delete DTC Measurements		
		MDG1	Read and delete DTC Measurements		
Megane 3	Engine electronics	EMS-3155	Read and delete DTC Measurements		
Scenic 3	Engine electronics	EMS-3155	Read and delete DTC Measurements		
Scenic 4	Top functions			Service reset instructions	
<b>Seat</b>					
Alhambra (7N)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake	
Arona (KJ)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake	
Ateca (5FP)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake	
Ibiza (6J)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Ibiza (6P)	Top functions	UDS		Basic setting of Xenon/LED headlamps Program battery	
Ibiza (6F)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Leon (5F)	Top functions	UDS		Basic setting of Xenon/LED headlamps Retract parking brake Program battery	
Tarraco (KN)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
				Reset inspection	
				Reset oil change interval	
	Airbag electronics		Read and delete DTC		
	Actuator, outside noise		Read and delete DTC		
	Actuator, structure-borne sound		Read and delete DTC		
	All-wheel electronic system		Read and delete DTC		
	Trailer control unit		Read and delete DTC		
	Brake / parking brake		Read and delete DTC		
	Distance control		Read and delete DTC		
	Parking aid		Read and delete DTC		
	Electric roof operation		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Main beam assistant		Read and delete DTC		
	Front sensor for driver assistance systems		Read and delete DTC		
	Gateway		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Head-up display		Read and delete DTC		
	Rear cover electronics		Read and delete DTC		
	Information electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Steering aid		Read and delete DTC		
	Steering column electronics		Read and delete DTC		
	Steering column lock		Read and delete DTC		
	Headlight range adjustment		Read and delete DTC		
	Engine electronics		Read and delete DTC		
	Emergency call module		Read and delete DTC		
	Tyre pressure monitoring		Read and delete DTC		
	Reversing camera system		Read and delete DTC		
	Driver side seat adjustment		Read and delete DTC		
	Sound system		Read and delete DTC		
Lane change assistant		Read and delete DTC			

	Passenger-door electronics		Read and delete DTC	
	Driver-door electronics		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Door electronics, rear right		Read and delete DTC	
	Auxiliary/independent heater		Read and delete DTC	
	Access and start authorisation		Read and delete DTC	
<b>Skoda</b>				
Fabia II	Top functions	UDS		Basic setting of Xenon/LED headlamps
Fabia III	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Program battery
Kamiq I	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
				Reset inspection
				Reset oil change interval
	Airbag electronics		Read and delete DTC	
	Actuator, structure-borne sound		Read and delete DTC	
	Trailer control unit		Read and delete DTC	
	Brake / parking brake		Read and delete DTC	
	Distance control		Read and delete DTC	
	Parking aid		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Front sensor for driver assistance systems		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Rear cover electronics		Read and delete DTC	
	Information electronics		Read and delete DTC	
	Access and start authorisation interface		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Steering aid		Read and delete DTC	
	Steering column electronics		Read and delete DTC	
	Steering column lock		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Reversing camera system		Read and delete DTC	
	Special function		Read and delete DTC	
	Sound system		Read and delete DTC	
	Lane change assistant		Read and delete DTC	
	Passenger-door electronics		Read and delete DTC	
	Driver-door electronics		Read and delete DTC	
	Auxiliary/independent heater		Read and delete DTC	
Karoq (NU)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
Kodiaq (NS)	Top functions	UDS		Basic setting of Xenon/LED headlamps
Octavia 2 (1Z)	Top functions	UDS		Basic setting of Xenon/LED headlamps
Octavia 3 (5E)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
				Program battery
Rapid (NA)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Program battery
Superb (3T)	Top functions	UDS		Basic setting of Xenon/LED headlamps
Superb (3V)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
Yeti (5L)	Top functions	UDS		Basic setting of Xenon/LED headlamps
<b>VW</b>				
Amarok (2H)	Top functions	UDS		Basic setting of Xenon/LED headlamps
Arteon	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
T6 (SG)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
Caddy (SB)	Top functions	UDS		Basic setting of Xenon/LED headlamps

				Retract parking brake	
Golf 6 (1K)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Golf Plus (1K)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Golf 7 (AU)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
				Program battery	
Golf Sportsvan (AU)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
				Program battery	
Jetta (162)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Passat (3G)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Basic setting of Matrix LED	
				Program battery	
Passat CC	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Phaeton (3D)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Polo (6C)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Program battery	
Polo (AW)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
Scirocco (13)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Sharan (7N)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
T-Cross (C1)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Reset inspection	
				Reset oil change interval	
	Airbag electronics		Read and delete DTC		
	Actuator, outside noise		Read and delete DTC		
	Actuator, structure-borne sound		Read and delete DTC		
	Trailer control unit		Read and delete DTC		
	Brake / parking brake		Read and delete DTC		
	Distance control		Read and delete DTC		
	Parking aid		Read and delete DTC		
	Electric roof operation		Read and delete DTC		
	Central electronics		Read and delete DTC		
	Main beam assistant		Read and delete DTC		
	Front sensor for driver assistance systems		Read and delete DTC		
	Gateway		Read and delete DTC		
	Gearbox electronics		Read and delete DTC		
	Information electronics		Read and delete DTC		
	Air conditioning electronics		Read and delete DTC		
	Instrument cluster		Read and delete DTC		
	Steering aid		Read and delete DTC		
	Steering column electronics		Read and delete DTC		
	Steering column lock		Read and delete DTC		
	Headlight range adjustment		Read and delete DTC		
	Engine electronics		Read and delete DTC		
	Emergency call module		Read and delete DTC		
	Tyre pressure monitoring		Read and delete DTC		
	Reversing camera system		Read and delete DTC		
	Driver side seat adjustment		Read and delete DTC		
	Sound system		Read and delete DTC		
	Lane change assistant		Read and delete DTC		
	Passenger-door electronics		Read and delete DTC		
	Driver-door electronics		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Door electronics, rear right		Read and delete DTC		
	Auxiliary/independent heater		Read and delete DTC		
	Access and start authorisation		Read and delete DTC		
Tiguan (5N)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
Tiguan (AD)	Top functions	UDS		Basic setting of Xenon/LED headlamps	
				Retract parking brake	
Touareg (7P)	Top functions	UDS		Basic setting of Xenon/LED headlamps	

Touareg (CR)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
				Reset inspection
				Reset oil change interval
	Airbag electronics		Read and delete DTC	
	Actuator, outside noise		Read and delete DTC	
	Actuator, structure-borne sound		Read and delete DTC	
	All-wheel electronic system		Read and delete DTC	
	Trailer control unit		Read and delete DTC	
	Brake / parking brake		Read and delete DTC	
	Distance control		Read and delete DTC	
	Parking aid		Read and delete DTC	
	Electric roof operation		Read and delete DTC	
	Electric drive		Read and delete DTC	
	Central electronics		Read and delete DTC	
	Main beam assistant		Read and delete DTC	
	Front sensor for driver assistance systems		Read and delete DTC	
	Gateway		Read and delete DTC	
	Gearbox electronics		Read and delete DTC	
	Head-up display		Read and delete DTC	
	Rear cover electronics		Read and delete DTC	
	Information electronics		Read and delete DTC	
	Air conditioning electronics		Read and delete DTC	
	Instrument cluster		Read and delete DTC	
	Steering aid		Read and delete DTC	
	Steering column electronics		Read and delete DTC	
	Steering column lock		Read and delete DTC	
	Engine electronics		Read and delete DTC	
	Emergency call module		Read and delete DTC	
	Wheel damping electronics		Read and delete DTC	
	Tyre pressure monitoring		Read and delete DTC	
	Reversing camera system		Read and delete DTC	
	Driver side seat adjustment		Read and delete DTC	
Sound system		Read and delete DTC		
Lane change assistant		Read and delete DTC		
Passenger-door electronics		Read and delete DTC		
Driver-door electronics		Read and delete DTC		
Door electronics, rear right		Read and delete DTC		
Door electronics, rear right		Read and delete DTC		
TV tuner		Read and delete DTC		
Auxiliary/independent heater		Read and delete DTC		
Access and start authorisation		Read and delete DTC		
Touran (1T)	Top functions	UDS		Basic setting of Xenon/LED headlamps
Touran (5T)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Basic setting of Matrix LED
T-Roc (A1)	Top functions	UDS		Basic setting of Xenon/LED headlamps
				Retract parking brake
<b>Wabco</b>				
	E Series	Model selection added		