

Manufacturer	Domain	Control device	Basis	Maintenance
Dacia				
Dokker	Additive control	11725	Read and delete DTC Measurements	
Duster 2	Additive control	11725	Read and delete DTC Measurements	
Lodgy	Additive control	11725	Read and delete DTC Measurements	
Logan 2	Additive control	11725	Read and delete DTC Measurements	
Sandero 2	Additive control	11725	Read and delete DTC Measurements	
Mercedes Benz				
A-Klasse W177	Airbag electronics	ORC177_000001	Read and delete DTC	
		ORC177_000002	Read and delete DTC	
		ORC177_000003	Read and delete DTC	
		ORC177_000004	Read and delete DTC	
		ORC177_000005	Read and delete DTC	
		ORC177_000006	Read and delete DTC	
	Battery electronics	IBS177_Variante_0200		
		IBS177_Variante_0201		
	Brake assistant	FCW177_Appl_008500	Read and delete DTC Measurements	
		FCW177_Appl_008501	Read and delete DTC Measurements	
		FCW177_Appl_008502	Read and delete DTC Measurements	
		FCW177_Appl_008503	Read and delete DTC Measurements	
		FCW177_Appl_008504	Read and delete DTC Measurements	
		FCW177_Appl_008505	Read and delete DTC Measurements	
		FCW177_Appl_008506	Read and delete DTC Measurements	
		FCW177_Appl_008507	Read and delete DTC Measurements	
		FCW177_Appl_008508	Read and delete DTC Measurements	
		FCW177_BR463_Appl_00870	Read and delete DTC Measurements	
		FCW177_BR463_Appl_00870	Read and delete DTC Measurements	
		FCW177_BR463_Appl_00870	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008601	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008602	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008603	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008604	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008605	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008606	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008607	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008608	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008609	Read and delete DTC Measurements	
	Air conditioning electronics	HVAC177_R_1	Read and delete DTC	
		HVAC177_R_2	Read and delete DTC	
		HVAC177_R_3	Read and delete DTC	
		HVAC177_R_4	Read and delete DTC	
		HVAC177_R_5	Read and delete DTC	
		HVAC177_R_6	Read and delete DTC	
		HVAC177_R_7	Read and delete DTC	
		HVAC177_R_7_1	Read and delete DTC	
		HVAC177_R_7_1_VAN	Read and delete DTC	
		HVAC177_R_8	Read and delete DTC	
		HVAC177_R_9	Read and delete DTC	
		HVAC177_R_10	Read and delete DTC	
		HVAC177_R_11	Read and delete DTC	

Steering wheel electronics	HVAC177_R_12	Read and delete DTC
	HVAC177_R_13	Read and delete DTC
	HVAC177_R_14	Read and delete DTC
	HVAC177_R_15	Read and delete DTC
	HVAC177_R_16	Read and delete DTC
	SWSP177_MQ_Rel4	Read and delete DTC Measurements
	SWSP177_MQ_Rel6	Read and delete DTC Measurements
	SWSP177_MQ_Rel7	Read and delete DTC Measurements
	SWSP177_MQ_Rel8	Read and delete DTC Measurements
	SWSP177_MQ_Rel9	Read and delete DTC Measurements
	SWSP177_MQ_Rel10	Read and delete DTC Measurements
	SWSP177_Preh_0x0001	Read and delete DTC Measurements
	SWSP177_Preh_0x0002	Read and delete DTC Measurements
	SWSP177_Preh_0x0003	Read and delete DTC Measurements
	SWSP177_Preh_0x0004	Read and delete DTC Measurements
	SWSP177_Preh_0x0005	Read and delete DTC Measurements
	SWSP177_Preh_0x0006	Read and delete DTC Measurements
	SWSP177_Preh_0x0007	Read and delete DTC Measurements
	SWSP177_Preh_0x0008	Read and delete DTC Measurements
	SWSP177_Preh_0x0009	Read and delete DTC Measurements
SWSP177_Preh_0x000A	Read and delete DTC Measurements	
SWSP177_Preh_0x000B	Read and delete DTC Measurements	
SWSP177_Preh_0x000C	Read and delete DTC Measurements	
SWSP177_Preh_0x000D	Read and delete DTC Measurements	
Steering column electronics	SCCM177_Kostal_0x2701	Read and delete DTC
	SCCM177_Kostal_0x2800	Read and delete DTC
	SCCM177_Kostal_0x2900	Read and delete DTC
	SCCM177_Kostal_0x2901	Read and delete DTC
	SCCM177_Kostal_0x2902	Read and delete DTC
Radar sensor rear left	IMRR177_R3_Appl_000300	Read and delete DTC
	IMRR177_R3_Appl_000301	Read and delete DTC
	IMRR177_R3_Appl_000302	Read and delete DTC
	IMRR177_R3_Appl_000303	Read and delete DTC
	IMRR177_R3_Appl_000304	Read and delete DTC
	IMRR177_R3_Appl_000305	Read and delete DTC
	IMRR177_R3_Appl_000306	Read and delete DTC
	IMRR177_R3_Appl_000307	Read and delete DTC
	IMRR177_R3_VS30_Appl_000401	Read and delete DTC
	IMRR177_R3_VS30_Appl_000402	Read and delete DTC
	IMRR177_R3_VS30_Appl_000403	Read and delete DTC
	IMRR177_R3_VS30_Appl_000404	Read and delete DTC
	IMRR177_R3_VS30_Appl_000405	Read and delete DTC
	IMRR177_R3_VS30_Appl_000406	Read and delete DTC
IMRR177_R3_VS30_Appl_000407	Read and delete DTC	
Radar sensor rear right	IMRR177_R1_Appl_000300	Read and delete DTC
	IMRR177_R1_Appl_000301	Read and delete DTC
	IMRR177_R1_Appl_000302	Read and delete DTC
	IMRR177_R1_Appl_000303	Read and delete DTC
	IMRR177_R1_Appl_000304	Read and delete DTC
	IMRR177_R1_Appl_000305	Read and delete DTC
	IMRR177_R1_Appl_000306	Read and delete DTC
	IMRR177_R1_Appl_000307	Read and delete DTC
	IMRR177_R1_VS30_Appl_000401	Read and delete DTC
	IMRR177_R1_VS30_Appl_000402	Read and delete DTC
	IMRR177_R1_VS30_Appl_000403	Read and delete DTC
	IMRR177_R1_VS30_Appl_000404	Read and delete DTC
	IMRR177_R1_VS30_Appl_000405	Read and delete DTC
	IMRR177_R1_VS30_Appl_000406	Read and delete DTC
IMRR177_R1_VS30_Appl_000407	Read and delete DTC	
Rain/light sensor	VCS177_0x000001	

		VCS177_0x000002	
		VCS177_0x000003	
		VCS177_0x000004	
		VCS177_0x000005	
		VCS177_0x000006	
		VCS177_0x000007	
		VCS177_0x000008	
		VCS177_0x000009	
		VCS177_0x00000A	
		VCS177_0x00000B	
		VCS177_0x00000C	
		VCS177_0x00000D	
		VCS177_0x00000E	
		VCS177_0x000106	
		VCS177_0x000107	
		VCS177_0x000108	
		VCS177_0x000109	
		VCS177_0x00010A	
		VCS177_0x00010B	
		VCS177_0x00010C	
		VCS177_0x00010D	
	Rear view camera	RVC177_RVC177_000020	Read and delete DTC
		RVC177_RVC177_000021	Read and delete DTC
		RVC177_RVC177_000022	Read and delete DTC
		RVC177_RVC177_000023	Read and delete DTC
		RVC177_RVC177_000024	Read and delete DTC
		RVC177_RVC177_000025	Read and delete DTC
		RVC177_RVC177_000026	Read and delete DTC
		RVC177_RVC177_008400	Read and delete DTC
		RVC177_RVC177_008401	Read and delete DTC
		RVC177_RVC177_008402	Read and delete DTC
		RVC177_RVC177_008403	Read and delete DTC
		RVC177_RVC177_008404	Read and delete DTC
		RVC177_RVC177_008405	Read and delete DTC
		RVC177_RVC177_008406	Read and delete DTC
	Headlamp electronics, left	HLI_FL247_BR177_IBN_DK20	Read and delete DTC
		HLI_FL247_BR177_LAB1_DK20	Read and delete DTC
		HLI_FL247_BR177_R1_DK21	Read and delete DTC
		HLI_FL247_BR177_R2_DK23	Read and delete DTC
		HLI_FL247_BR177_R3_DK24	Read and delete DTC
		HLI_FL247_BR177_R4_DK25	Read and delete DTC
		HLI_FL247_BR177_R5_DK26	Read and delete DTC
		HLI_FL247_BR177_R6_DK27	Read and delete DTC
		HLI_FL247_BR177_R7_DK28	Read and delete DTC
		HLI_FL247_BR177_R7_1_DK29	Read and delete DTC
		HLI_FL247_BR213M_R2_DK10	Read and delete DTC
	Headlamp electronics, right	HLI_FR247_BR177_IBN_DK20	Read and delete DTC
		HLI_FR247_BR177_LAB1_DK20	Read and delete DTC
		HLI_FR247_BR177_R1_DK21	Read and delete DTC
		HLI_FR247_BR177_R2_DK23	Read and delete DTC
		HLI_FR247_BR177_R3_DK24	Read and delete DTC
		HLI_FR247_BR177_R4_DK25	Read and delete DTC
		HLI_FR247_BR177_R5_DK26	Read and delete DTC
		HLI_FR247_BR177_R6_DK27	Read and delete DTC
		HLI_FR247_BR177_R7_DK28	Read and delete DTC
		HLI_FR247_BR177_R7_1_DK29	Read and delete DTC
		HLI_FR247_BR213M_R2_DK10	Read and delete DTC
	Central electronics	BCMFA2_R_1	Read and delete DTC
		BCMFA2_R_2	Read and delete DTC
		BCMFA2_R_3	Read and delete DTC
		BCMFA2_R_4	Read and delete DTC
		BCMFA2_R_5	Read and delete DTC
		BCMFA2_R_6	Read and delete DTC
		BCMFA2_R_7	Read and delete DTC
		BCMFA2_R_7_1	Read and delete DTC
		BCMFA2_R_8;	Read and delete DTC
		BCMFA2_R_8_1	Read and delete DTC
		BCMFA2_R_9	Read and delete DTC
		BCMFA2_R_A2	Read and delete DTC
		BCMFA2_R_B_IBN_Int_1	Read and delete DTC
		BCMFA2_R_LAB_1	Read and delete DTC
		BCMFA2_R_10	Read and delete DTC
		BCMFA2_R_11	Read and delete DTC
		BCMFA2_R_12	Read and delete DTC
		BCMFA2_R_13	Read and delete DTC
		BCMFA2_R_14	Read and delete DTC
B-Klasse W247	Airbag electronics	ORC177_000001	Read and delete DTC
		ORC177_000002	Read and delete DTC
		ORC177_000003	Read and delete DTC
		ORC177_000004	Read and delete DTC
		ORC177_000005	Read and delete DTC

	Steering column electronics	ORC177_000006	Read and delete DTC			
		SCCM177_Kostal_0x2701	Read and delete DTC			
		SCCM177_Kostal_0x2800	Read and delete DTC			
		SCCM177_Kostal_0x2900	Read and delete DTC			
		SCCM177_Kostal_0x2901	Read and delete DTC			
	Rear view camera	SCCM177_Kostal_0x2902	Read and delete DTC			
		RVC177_RVC177_000020	Read and delete DTC			
		RVC177_RVC177_000021	Read and delete DTC			
		RVC177_RVC177_000022	Read and delete DTC			
		RVC177_RVC177_000023	Read and delete DTC			
		RVC177_RVC177_000024	Read and delete DTC			
		RVC177_RVC177_000025	Read and delete DTC			
		RVC177_RVC177_000026	Read and delete DTC			
		RVC177_RVC177_008400	Read and delete DTC			
		RVC177_RVC177_008401	Read and delete DTC			
		RVC177_RVC177_008402	Read and delete DTC			
		RVC177_RVC177_008403	Read and delete DTC			
	Headlamp electronics, left	RVC177_RVC177_008404	Read and delete DTC			
		RVC177_RVC177_008405	Read and delete DTC			
		RVC177_RVC177_008406	Read and delete DTC			
		HLI_FL247_BR177_IBN_DK20	Read and delete DTC			
		HLI_FL247_BR177_LAB1_DK20	Read and delete DTC			
		HLI_FL247_BR177_R1_DK21	Read and delete DTC			
		HLI_FL247_BR177_R2_DK23	Read and delete DTC			
		HLI_FL247_BR177_R3_DK24	Read and delete DTC			
		HLI_FL247_BR177_R4_DK25	Read and delete DTC			
		HLI_FL247_BR177_R5_DK26	Read and delete DTC			
		HLI_FL247_BR177_R6_DK27	Read and delete DTC			
		HLI_FL247_BR177_R7_DK28	Read and delete DTC			
		Headlamp electronics, right	HLI_FL247_BR177_R7_1_DK29	Read and delete DTC		
	HLI_FL247_BR213M_R2_DK10		Read and delete DTC			
	HLI_FR247_BR177_IBN_DK20		Read and delete DTC			
	HLI_FR247_BR177_LAB1_DK20		Read and delete DTC			
	HLI_FR247_BR177_R1_DK21		Read and delete DTC			
	HLI_FR247_BR177_R2_DK23		Read and delete DTC			
	HLI_FR247_BR177_R3_DK24		Read and delete DTC			
	HLI_FR247_BR177_R4_DK25		Read and delete DTC			
	HLI_FR247_BR177_R5_DK26		Read and delete DTC			
	HLI_FR247_BR177_R6_DK27		Read and delete DTC			
	HLI_FR247_BR177_R7_DK28		Read and delete DTC			
	HLI_FR247_BR177_R7_1_DK29		Read and delete DTC			
	E-Klasse W213, 238		Multifunction camera	HLI_FR247_BR213M_R2_DK10	Read and delete DTC	
		MMPC213_MFA2_var00840D		Read and delete DTC Measurements	Calibrate multifunction camera	
			MMPC213_MFA2_var00840E	Read and delete DTC Measurements	Calibrate multifunction camera	
		Central electronics	BCMFA2_R_1	Read and delete DTC		
			BCMFA2_R_2	Read and delete DTC		
			BCMFA2_R_3	Read and delete DTC		
BCMFA2_R_4			Read and delete DTC			
BCMFA2_R_5			Read and delete DTC			
BCMFA2_R_6			Read and delete DTC			
BCMFA2_R_7			Read and delete DTC			
BCMFA2_R_7_1			Read and delete DTC			
BCMFA2_R_8;			Read and delete DTC			
BCMFA2_R_8_1			Read and delete DTC			
BCMFA2_R_9			Read and delete DTC			
BCMFA2_R_A2			Read and delete DTC			
BCMFA2_R_B_IBN_Int_1			Read and delete DTC			
BCMFA2_R_LAB_1			Read and delete DTC			
BCMFA2_R_10			Read and delete DTC			
BCMFA2_R_11			Read and delete DTC			
BCMFA2_R_12			Read and delete DTC			
GLE V167/X167/C167			Power steering	BCMFA2_R_13	Read and delete DTC	
	BCMFA2_R_14	Read and delete DTC				
	EPS167_4400	Read and delete DTC				
	EPS167_4401	Read and delete DTC				
	EPS167_4402	Read and delete DTC				
	EPS167_4403	Read and delete DTC				
	EPS167_4404	Read and delete DTC				
	EPS167_4405	Read and delete DTC				
	EPS167_4406	Read and delete DTC				
	EPS167_C400	Read and delete DTC				
	EPS167_C401	Read and delete DTC				
	EPS167_C402	Read and delete DTC				
	EPS167_C403	Read and delete DTC				
	EPS167_C404	Read and delete DTC				
	EPS167_C405	Read and delete DTC				
	EPS167_C406	Read and delete DTC				
	Seat electronics front left	SEATD167_Lab1_008100		Read and delete DTC		
		SEATD167_Rel1_008101		Read and delete DTC		
SEATD167_Rel2_008102		Read and delete DTC				

		SEATD167_Rel3_008103	Read and delete DTC
		SEATD167_Rel4_008104	Read and delete DTC
		SEATD167_Rel5_008105	Read and delete DTC
		SEATD167_Rel6_008106	Read and delete DTC
		SEATD167_Rel7_000107	Read and delete DTC
		SEATD167_Rel8_000108	Read and delete DTC
		SEATD167_Rel9_000109	Read and delete DTC
		SEATD167_Rel10_00010A	Read and delete DTC
		SEATD167_Rel11_00010B	Read and delete DTC
	Seat electronics front right	SEATP167_Lab1_008100	Read and delete DTC
		SEATP167_Rel1_008101	Read and delete DTC
		SEATP167_Rel2_008102	Read and delete DTC
		SEATP167_Rel3_008103	Read and delete DTC
		SEATP167_Rel4_008104	Read and delete DTC
		SEATP167_Rel5_008105	Read and delete DTC
		SEATP167_Rel6_008106	Read and delete DTC
		SEATP167_Rel7_000107	Read and delete DTC
		SEATP167_Rel8_000108	Read and delete DTC
		SEATP167_Rel9_000109	Read and delete DTC
		SEATP167_Rel10_00010A	Read and delete DTC
		SEATP167_Rel11_00010B	Read and delete DTC
	Electrical ignition switch	EZS167_B1_Muster	Read and delete DTC
			Measurements
		EZS167_B2_Muster	Read and delete DTC
			Measurements
		EZS167_C1_Muster	Read and delete DTC
			Measurements
		EZS167_C2_Muster	Read and delete DTC
			Measurements
		EZS167_C3_Muster	Read and delete DTC
			Measurements
		EZS167_C4_Muster	Read and delete DTC
			Measurements
		EZS167_C5_Muster	Read and delete DTC
			Measurements
		EZS167_C6_Muster	Read and delete DTC
			Measurements
		EZS167_C7_Muster	Read and delete DTC
			Measurements
		EZS167_D1_Muster	Read and delete DTC
			Measurements
		EZS167_D4_Muster	Read and delete DTC
			Measurements
		EZS167_D5_Muster	Read and delete DTC
			Measurements
		EZS167_D6_Muster	Read and delete DTC
			Measurements
		EZS167_D7_Muster	Read and delete DTC
			Measurements
		EZS167_D8_Muster	Read and delete DTC
			Measurements
		EZS167_D9_Muster	Read and delete DTC
			Measurements
S-Klasse W222	Selector lever module	DSM222_0001	Read and delete DTC
		DSM222_0002	Read and delete DTC
		DSM222_0003	Read and delete DTC
		DSM222_0004	Read and delete DTC
		DSM222_0005	Read and delete DTC
		DSM222_8001	Read and delete DTC
		DSM222_8002	Read and delete DTC
Sprinter III 907 / 910	Exhaust gas aftertreatment	UDCM__14B_MS0300_DK02	Read and delete DTC
			Measurements
		UDCM__14B_MS0310_DK03	Read and delete DTC
			Measurements
		UDCM__14B_MS0320_DK04	Read and delete DTC
			Measurements
		UDCM__14B_MS0330_DK05	Read and delete DTC
			Measurements
		UDCM__15A_MS0400_DK10	Read and delete DTC
			Measurements
		UDCM__15A_MS0410_DK11	Read and delete DTC
			Measurements
		UDCM__15A_MS0420_DK12	Read and delete DTC
			Measurements
		UDCM__15A_MS0430_DK13	Read and delete DTC
			Measurements
		UDCM__15A_MS043B_DK14	Read and delete DTC
			Measurements
		UDCM__15A_MS0440_DK15	Read and delete DTC
			Measurements
		UDCM__15A_MS0450_DK16	Read and delete DTC
			Measurements

UDCM__15A_MS0498_DK17	Read and delete DTC Measurements
UDCM__15A_MS0499_DK18	Read and delete DTC Measurements
UDCM__15B_MS0500_DK20	Read and delete DTC Measurements
UDCM__15B_MS0510_DK22	Read and delete DTC Measurements
UDCM__15B_MS0525_DK26	Read and delete DTC Measurements
UDCM__15B_MS0530_DK2A	Read and delete DTC Measurements
UDCM__16A_MS0600_DK30	Read and delete DTC Measurements
UDCM__16A_MS0600_WWHOB_D K30	Read and delete DTC Measurements
UDCM__16A_MS0610_DK33	Read and delete DTC Measurements
UDCM__16A_MS0610_WWHOB_D K33	Read and delete DTC Measurements
UDCM__16A_MS0620_DK36	Read and delete DTC Measurements
UDCM__16A_MS0620_WWHOB_D K36	Read and delete DTC Measurements
UDCM__16A_MS062A_DK37	Read and delete DTC Measurements
UDCM__16A_MS062A_WWHOB_D K37	Read and delete DTC Measurements
UDCM__16A_MS0630_DK39	Read and delete DTC Measurements
UDCM__16A_MS0630_WWHOB_D K39;	Read and delete DTC Measurements
UDCM__16A_MS0640_DK3A	Read and delete DTC Measurements
UDCM__16A_MS0649_DK3B	Read and delete DTC Measurements
UDCM__16A_MS0650_DK3C	Read and delete DTC Measurements
UDCM__16A_MS0660_DK3D	Read and delete DTC Measurements
UDCM__16A_MS0660_DK3E	Read and delete DTC Measurements
UDCM__16B_MS0700_DK40	Read and delete DTC Measurements
UDCM__16B_MS0700_WWHOB_D K40	Read and delete DTC Measurements
UDCM__16B_MS0720_DK46	Read and delete DTC Measurements
UDCM__16B_MS0730_DK49	Read and delete DTC Measurements
UDCM__16B_MS0730_WWHOB_D K49	Read and delete DTC Measurements
UDCM__16B_MS0749_DK51	Read and delete DTC Measurements
UDCM__16B_MS0749_WWHOB_D K51	Read and delete DTC Measurements
UDCM__17A_MS0800_DK55	Read and delete DTC Measurements
UDCM__17A_MS0800_WWHOB_D K55	Read and delete DTC Measurements
UDCM__17A_MS0810_DK59	Read and delete DTC Measurements
UDCM__17A_MS0810_WWHOB_D K59	Read and delete DTC Measurements
UDCM__17A_MS08A0_DK57	Read and delete DTC Measurements
UDCM__17A_MS08A0_WWHOB_D K57	Read and delete DTC Measurements
UDCM__17B_MS0900_DK63	Read and delete DTC Measurements
UDCM__17B_MS0900_WWHOB_D K63	Read and delete DTC Measurements
UDCM__17B_MS0940_DK69	Read and delete DTC Measurements
UDCM__15A_MS049K_DK19	Read and delete DTC Measurements
UDCM__17B_MS0920_DK64	Read and delete DTC Measurements
UDCM__17B_MS0920_WWHOB_D K64	Read and delete DTC Measurements
UDCM__17B_MS0930_DK65	Read and delete DTC Measurements

		UDCM__17B_MS0930_WWHOB_D K65	Read and delete DTC Measurements	
		UDCM__17B_MS0940_DK68	Read and delete DTC Measurements	
		UDCM__17B_MS0940_WWHOB_D K68	Read and delete DTC Measurements	
		UDCM__17B_MS0940_WWHOB_D K69	Read and delete DTC Measurements	
		UDCM__18A_MS0A00_DK71	Read and delete DTC Measurements	
		UDCM__18A_MS0A00_WWHOB_D K71	Read and delete DTC Measurements	
		UDCM__18A_MS0A10_DK73	Read and delete DTC Measurements	
		UDCM__18A_MS0A10_WWHOB_D K73	Read and delete DTC Measurements	
		UDCM__18A_MS0A30_DK75	Read and delete DTC Measurements	
		UDCM__18A_MS0A30_WWHOB_D K75	Read and delete DTC Measurements	
		UDCM__18A_MS0A40_DK77	Read and delete DTC Measurements	
		UDCM__18A_MS0A40_WWHOB_D K77	Read and delete DTC Measurements	
	Airbag electronics	ORC177__000001	Read and delete DTC	
		ORC177__000002	Read and delete DTC	
		ORC177__000003	Read and delete DTC	
		ORC177__000004	Read and delete DTC	
		ORC177__000005	Read and delete DTC	
		ORC177__000006	Read and delete DTC	
	All-wheel electronic system	VG907_VG907_000050	Read and delete DTC	
		VG907_VG907_000051	Read and delete DTC	
		VG907_VG907_008540	Read and delete DTC	
		VG907_VG907_008541	Read and delete DTC	
		VG907_VG907_008542	Read and delete DTC	
		VG907_VG907_008543	Read and delete DTC	
		VG907_VG907_008544	Read and delete DTC	
	Trailer electronics	TM205_0x001000	Read and delete DTC Measurements	
		TM205_0x009004	Read and delete DTC Measurements	
		TM205_0x009005	Read and delete DTC Measurements	
		TM205_0x009006	Read and delete DTC Measurements	
		TM205_R15_1	Read and delete DTC Measurements	
		TM205_R18	Read and delete DTC Measurements	
		TM205_R30	Read and delete DTC Measurements	
		TM205_R34	Read and delete DTC Measurements	
		TM205_TM213_R18	Read and delete DTC Measurements	
		TM205_TM213_R21	Read and delete DTC Measurements	
		TM205_TM213_R23_2	Read and delete DTC Measurements	
		TM205_TM213_R26	Read and delete DTC Measurements	
		TM205_TM213_R26_1_2	Read and delete DTC Measurements	
		TM205_TM213_R30	Read and delete DTC Measurements	
		TM205_TM213_R30_2	Read and delete DTC Measurements	
		TM205_TM213_R35	Read and delete DTC Measurements	
		TM205_TM213_R38	Read and delete DTC Measurements	
		TM205_TM213_R39	Read and delete DTC Measurements	
	Drive train electronics	CPC_NG_R13B	Read and delete DTC Measurements	
		CPC_NG_R14A	Read and delete DTC Measurements	
		CPC_NG_R14B1	Read and delete DTC Measurements	
		CPC_NG_R14B2	Read and delete DTC Measurements	
		CPC_NG_R15A	Read and delete DTC	

			Measurements	
		CPC_NG_R15A1	Read and delete DTC Measurements	
		CPC_NG_R15B	Read and delete DTC Measurements	
		CPC_NG_R15B1	Read and delete DTC Measurements	
		CPC_NG_R16A	Read and delete DTC Measurements	
		CPC_NG_R16B	Read and delete DTC Measurements	
		CPC_NG_R16B1	Read and delete DTC Measurements	
		CPC_NG_R16B2	Read and delete DTC Measurements	
		CPC_NG_R17A	Read and delete DTC Measurements	
		CPC_NG_R17A_MFA2H	Read and delete DTC Measurements	
		CPC_NG_R17A1	Read and delete DTC Measurements	
		CPC_NG_R17A2	Read and delete DTC Measurements	
		CPC_NG_R17B	Read and delete DTC Measurements	
		CPC_NG_R17B_MFA2H	Read and delete DTC Measurements	
		CPC_NG_R18A	Read and delete DTC Measurements	
		CPC_NG_R18A1	Read and delete DTC Measurements	
Battery electronics		IBS177_Variante_0200		
		IBS177_Variante_0201		
Control panel roof		OHCM907_DBE_High_004000		
		OHCM907_DBE_High_004001		
		OHCM907_DBE_High_004002		
		OHCM907_DBE_High_004003		
		OHCM907_DBE_High_004004		
		OHCM907_DBE_High_004005		
		OHCM907_DBE_High_004006		
		OHCM907_DBE_High_004007		
		OHCM907_DBE_Standard_003000		
		OHCM907_DBE_Standard_003001		
		OHCM907_DBE_Standard_003002		
		OHCM907_DBE_Standard_003003		
		OHCM907_DBE_Standard_003004		
		OHCM907_DBE_Standard_003005		
		OHCM907_DBE_Standard_003006		
Control panel top		ASBM_HU_Diag_000001	Read and delete DTC	
		ASBM_HU_Diag_000002	Read and delete DTC	
Brake assistant		FCW177_Appl_008500	Read and delete DTC Measurements	
		FCW177_Appl_008501	Read and delete DTC Measurements	
		FCW177_Appl_008502	Read and delete DTC Measurements	
		FCW177_Appl_008503	Read and delete DTC Measurements	
		FCW177_Appl_008504	Read and delete DTC Measurements	
		FCW177_Appl_008505	Read and delete DTC Measurements	
		FCW177_Appl_008506	Read and delete DTC Measurements	
		FCW177_Appl_008507	Read and delete DTC Measurements	
		FCW177_Appl_008508	Read and delete DTC Measurements	
		FCW177_BR463_Appl_00870	Read and delete DTC Measurements	
		FCW177_BR463_Appl_00870	Read and delete DTC Measurements	
		FCW177_BR463_Appl_00870	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008601	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008602	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008603	Read and delete DTC Measurements	
		FCW177_VS30_Appl_008604	Read and delete DTC Measurements	

	FCW177_VS30_Appl_008605	Read and delete DTC Measurements
	FCW177_VS30_Appl_008606	Read and delete DTC Measurements
	FCW177_VS30_Appl_008607	Read and delete DTC Measurements
	FCW177_VS30_Appl_008608	Read and delete DTC Measurements
	FCW177_VS30_Appl_008609	Read and delete DTC Measurements
Brake electronics	ESP907_BS2_PreRelease	Read and delete DTC
	ESP907_BS4_1_Release_0	Read and delete DTC
	ESP907_BS4_2	Read and delete DTC
	ESP907_BS5	Read and delete DTC
	ESP907_BS6	Read and delete DTC
	ESP907_BS7	Read and delete DTC
	ESP907_BS8	Read and delete DTC
	ESP907_BS8_Base	Read and delete DTC
	ESP907_BS9_1	Read and delete DTC
	ESP907_BS9_2_Base	Read and delete DTC
	ESP907_BS9_2_Premium	Read and delete DTC
	ESP907_BS10_Base	Read and delete DTC
	ESP907_BS10_Base_Passive_Software	Read and delete DTC
	ESP907_BS10_Premium	Read and delete DTC
	ESP907_BS10_Premium_Passive_Software	Read and delete DTC
	ESP907_BS11_Base	Read and delete DTC
	ESP907_BS11_Premium	Read and delete DTC
	ESP907_BS11_3_Base	Read and delete DTC
	ESP907_BS11_3_Premium	Read and delete DTC
	ESP907_BS12_1_Base	Read and delete DTC
	ESP907_BS12_1_Premium	Read and delete DTC
	ESP907_BS13_0_Base	Read and delete DTC
	ESP907_BS13_0_Premium	Read and delete DTC
	ESP907_BS13_1_Base	Read and delete DTC
	ESP907_BS13_1_Premium	Read and delete DTC
	ESP907_BS14_Base	Read and delete DTC
	ESP907_BS14_Premium	Read and delete DTC
	ESP907_BS15_0_Base;	Read and delete DTC
	ESP907_BS15_0_Premium	Read and delete DTC
	ESP907_BS15_1_Base;	Read and delete DTC
	ESP907_BS15_1_Premium	Read and delete DTC
	ESP907_BS15_2_Base	Read and delete DTC
	ESP907_BS15_2_Premium	Read and delete DTC
	ESP907_BS16_0_Base	Read and delete DTC
	ESP907_BS16_0_Premium	Read and delete DTC
	ESP907_BS17_0_Base	Read and delete DTC
	ESP907_BS17_0_Premium	Read and delete DTC
Parking aid	PARKMAN213_ParkMan_006626	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006629	Read and delete DTC Measurements
	PARKMAN213_ParkMan_00662A	Read and delete DTC Measurements
	PARKMAN213_ParkMan_00662B	Read and delete DTC Measurements
	PARKMAN213_ParkMan_00662C	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006640	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006650	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006660	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006661	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006662	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006664	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006665	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006666	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006670	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006680	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006681	Read and delete DTC Measurements
	PARKMAN213_ParkMan_006682	Read and delete DTC

			Measurements	
		PARKMAN213_ParkMan_006729	Read and delete DTC Measurements	
		PARKMAN213_ParkMan_00672A	Read and delete DTC Measurements	
		PARKMAN213_ParkMan_006730	Read and delete DTC Measurements	
	Electrical ignition switch	EZS167_B1_Muster	Read and delete DTC Measurements	
		EZS167_B2_Muster	Read and delete DTC Measurements	
		EZS167_C1_Muster	Read and delete DTC Measurements	
		EZS167_C2_Muster	Read and delete DTC Measurements	
		EZS167_C3_Muster	Read and delete DTC Measurements	
		EZS167_C4_Muster	Read and delete DTC Measurements	
		EZS167_C5_Muster	Read and delete DTC Measurements	
		EZS167_C6_Muster	Read and delete DTC Measurements	
		EZS167_C7_Muster	Read and delete DTC Measurements	
		EZS167_D1_Muster	Read and delete DTC Measurements	
		EZS167_D4_Muster	Read and delete DTC Measurements	
		EZS167_D5_Muster	Read and delete DTC Measurements	
		EZS167_D6_Muster	Read and delete DTC Measurements	
		EZS167_D7_Muster	Read and delete DTC Measurements	
		EZS167_D8_Muster	Read and delete DTC Measurements	
		EZS167_D9_Muster	Read and delete DTC Measurements	
	Gearbox electronics	FAG910_FAG910_000500	Read and delete DTC	
		FAG910_FAG910_000501	Read and delete DTC	
		FAG910_FAG910_000502	Read and delete DTC	
		FAG910_FAG910_008500	Read and delete DTC	
		FAG910_FAG910_008501	Read and delete DTC	
		VGSNAG2_VGS2_0101	Read and delete DTC	
		VGSNAG2_VGS2_0501	Read and delete DTC	
		VGSNAG2_VGS2_8101	Read and delete DTC	
		VGSNAG2_VGS3_04A1	Read and delete DTC	
		VGSNAG2_VGS3_04A2	Read and delete DTC	
		VGSNAG2_VGS3_04A3	Read and delete DTC	
		VGSNAG2_VGS3_84A1	Read and delete DTC	
		VGSNAG2_VGS3_84A2	Read and delete DTC	
		VGSNAG2_VGS3_84A3	Read and delete DTC	
		VGSNAG2_VGS3_0401	Read and delete DTC	
		VGSNAG2_VGS3_0402	Read and delete DTC	
		VGSNAG2_VGS3_0403	Read and delete DTC	
		VGSNAG2_VGS3_0602	Read and delete DTC	
		VGSNAG2_VGS3_8401	Read and delete DTC	
		VGSNAG2_VGS3_8402	Read and delete DTC	
		VGSNAG2_VGS3_8403	Read and delete DTC	
		VGSNAG2_VGS_0001	Read and delete DTC	
		VGSNAG2_VGS_8001	Read and delete DTC	
	Information display	ev_DISP6_DISP6_VAN_LGE_High	Read and delete DTC	
		ev_DISP6_DISP6_VAN_LGE_Entry	Read and delete DTC	
		ev_DISP6_DISP6_167_Melco	Read and delete DTC	
		ev_DISP6_DISP6_205Mopf_LGE	Read and delete DTC	
		ev_DISP6_DISP6_205Mopf_Melco	Read and delete DTC	
		ev_DISP6_DISP6_253Mopf_LGE	Read and delete DTC	
		ev_DISP6_DISP6_253Mopf_Melco	Read and delete DTC	
		ev_DISP6_DISP6_LGE	Read and delete DTC	
		ev_DISP6_DISP6_MFA2_Melco	Read and delete DTC	
	Air conditioning electronics	HVAC177_R_1	Read and delete DTC	
		HVAC177_R_2	Read and delete DTC	
		HVAC177_R_3	Read and delete DTC	
		HVAC177_R_4	Read and delete DTC	
		HVAC177_R_5	Read and delete DTC	
		HVAC177_R_6	Read and delete DTC	
		HVAC177_R_7	Read and delete DTC	
		HVAC177_R_7_1	Read and delete DTC	
		HVAC177_R_7_1_VAN	Read and delete DTC	
		HVAC177_R_8	Read and delete DTC	
		HVAC177_R_9	Read and delete DTC	

	HVAC177_R_10	Read and delete DTC
	HVAC177_R_11	Read and delete DTC
	HVAC177_R_12	Read and delete DTC
	HVAC177_R_13	Read and delete DTC
	HVAC177_R_14	Read and delete DTC
	HVAC177_R_15	Read and delete DTC
	HVAC177_R_16	Read and delete DTC
Instrument cluster	IC907_BR907_High_X3_R2	Read and delete DTC
	IC907_BR907_High_X4_R3	Read and delete DTC
	IC907_BR907_High_X5_R4	Read and delete DTC
	IC907_BR907_High_X6_R5	Read and delete DTC
	IC907_BR907_High_X7_R6	Read and delete DTC
	IC907_BR907_High_X8_R7	Read and delete DTC
	IC907_BR907_High_X9_R7_1	Read and delete DTC
	IC907_BR907_High_X10_R8	Read and delete DTC
	IC907_BR907_High_X12_R11	Read and delete DTC
	IC907_BR907_High_X14_R14	Read and delete DTC
	IC907_BR907_High_X15_R15	Read and delete DTC
	IC907_BR907_Kombi_X002_R0	Read and delete DTC
	IC907_BR907_LM_X3_R2	Read and delete DTC
	IC907_BR907_LM_X4_R3	Read and delete DTC
	IC907_BR907_LM_X5_R4	Read and delete DTC
	IC907_BR907_LM_X6_R5	Read and delete DTC
	IC907_BR907_LM_X7_R6	Read and delete DTC
	IC907_BR907_LM_X8_R7	Read and delete DTC
	IC907_BR907_LM_X9_R7_1	Read and delete DTC
	IC907_BR907_LM_X10_R8	Read and delete DTC
	IC907_BR907_LM_X12_R11	Read and delete DTC
	IC907_BR907_LM_X14_R14	Read and delete DTC
	IC907_BR907_LM_X15_R15	Read and delete DTC
Fuel pump	FSCM_GEN5_R16A	Read and delete DTC
	FSCM_GEN5_R16B	Read and delete DTC
	FSCM_GEN5_R17A	Read and delete DTC
	FSCM_GEN5_R17A_C503	Read and delete DTC
	FSCM_GEN5_R17A_C504	Read and delete DTC
	FSCM_GEN5_R17B_C505	Read and delete DTC
	FSCM_GEN5_R17B_C506	Read and delete DTC
	FSCM_GEN5_R18A_C507	Read and delete DTC
Steering wheel electronics	SWSP177_MQ_Rel4	Read and delete DTC Measurements
	SWSP177_MQ_Rel6	Read and delete DTC Measurements
	SWSP177_MQ_Rel7	Read and delete DTC Measurements
	SWSP177_MQ_Rel8	Read and delete DTC Measurements
	SWSP177_MQ_Rel9	Read and delete DTC Measurements
	SWSP177_MQ_Rel10	Read and delete DTC Measurements
	SWSP177_Preh_0x0001	Read and delete DTC Measurements
	SWSP177_Preh_0x0002	Read and delete DTC Measurements
	SWSP177_Preh_0x0003	Read and delete DTC Measurements
	SWSP177_Preh_0x0004	Read and delete DTC Measurements
	SWSP177_Preh_0x0005	Read and delete DTC Measurements
	SWSP177_Preh_0x0006	Read and delete DTC Measurements
	SWSP177_Preh_0x0007	Read and delete DTC Measurements
	SWSP177_Preh_0x0008	Read and delete DTC Measurements
	SWSP177_Preh_0x0009	Read and delete DTC Measurements
	SWSP177_Preh_0x000A	Read and delete DTC Measurements
	SWSP177_Preh_0x000B	Read and delete DTC Measurements
	SWSP177_Preh_0x000C	Read and delete DTC Measurements
	SWSP177_Preh_0x000D	Read and delete DTC Measurements
Steering column electronics	SCCM177_Kostal_0x2701	Read and delete DTC
	SCCM177_Kostal_0x2800	Read and delete DTC
	SCCM177_Kostal_0x2900	Read and delete DTC
	SCCM177_Kostal_0x2901	Read and delete DTC
	SCCM177_Kostal_0x2902	Read and delete DTC
Engine electronics	CR61NFZ_Diag_30h	Read and delete DTC

	CR61NFZ_Diag_31h	Read and delete DTC	
	CR61NFZ_Diag_32h	Read and delete DTC	
	CR61_Diag_03h	Read and delete DTC	
	CR61_Diag_04h	Read and delete DTC	
	CR61_Diag_05h	Read and delete DTC	
	CR61_Diag_07h	Read and delete DTC	
	CR61_Diag_08h	Read and delete DTC	
	CR61_Diag_09h	Read and delete DTC	
	CR61_Diag_0Ah	Read and delete DTC	
	CR61_Diag_0Bh	Read and delete DTC	
	CR61_Diag_0Ch	Read and delete DTC	
	CR61_Diag_10h	Read and delete DTC	
	CR61_Diag_11h	Read and delete DTC	
	CR61_Diag_12h	Read and delete DTC	
	CR61_Diag_13h	Read and delete DTC	
	CR61_Diag_14h	Read and delete DTC	
	CR61_Diag_20h	Read and delete DTC	
	CR61_Diag_21h	Read and delete DTC	
	CR61_Diag_22h	Read and delete DTC	
	CR61_Diag_23h	Read and delete DTC	
	CR43_Diag_0Ah	Read and delete DTC	
	CR43_Diag_0Bh	Read and delete DTC	
	CR43_Diag_0Ch	Read and delete DTC	
	CR43_Diag_02h	Read and delete DTC	
	CR43_Diag_03h	Read and delete DTC	
	CR43_Diag_04h	Read and delete DTC	
	CR43_Diag_05h	Read and delete DTC	
	CR43_Diag_06h	Read and delete DTC	
	CR43_Diag_07h	Read and delete DTC	
	CR43_Diag_08h	Read and delete DTC	
	CR43_Diag_09h	Read and delete DTC	
	CR43_Diag_10h	Read and delete DTC	
	CR43_Diag_11h	Read and delete DTC	
	CR43_Diag_12h	Read and delete DTC	
	CR43_Diag_13h	Read and delete DTC	
	CR43_Diag_20h	Read and delete DTC	
	CR43_Diag_21h	Read and delete DTC	
	CR43_Diag_22h	Read and delete DTC	
	CR43_Diag_23h	Read and delete DTC	
	CR43_Diag_24h	Read and delete DTC	
	CR43_Diag_25h	Read and delete DTC	
	CR43_Diag_26h	Read and delete DTC	
	CR43_Diag_30h	Read and delete DTC	
	MED177_VC12	Read and delete DTC	
	MED177_VC14	Read and delete DTC	
	MED177_VC15	Read and delete DTC	
	MED40	Read and delete DTC	
Multifunction camera	MMPC213_MFA2_var008400	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008401	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008402	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008403	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008404	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008405	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008406	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008407	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008408	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var008409	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var00840A	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var00840B	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var00840C	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var00840D	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_MFA2_var00840E	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_var008302	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_var008303	Read and delete DTC Measurements	Calibrate multifunction camera
	MMPC213_var008304	Read and delete DTC	Calibrate multifunction camera

			Measurements	
		MMPC213_var008305	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var008306	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var008307	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var008308	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var008309	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var00830A	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var00830B	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var00830C	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var00830D	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var00830E	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var00830F	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var008310	Read and delete DTC Measurements	Calibrate multifunction camera
		MMPC213_var008311	Read and delete DTC Measurements	Calibrate multifunction camera
	Radar sensor rear left	IMRR177_R3_Appl_000300	Read and delete DTC	
		IMRR177_R3_Appl_000301	Read and delete DTC	
		IMRR177_R3_Appl_000302	Read and delete DTC	
		IMRR177_R3_Appl_000303	Read and delete DTC	
		IMRR177_R3_Appl_000304	Read and delete DTC	
		IMRR177_R3_Appl_000305	Read and delete DTC	
		IMRR177_R3_Appl_000306	Read and delete DTC	
		IMRR177_R3_Appl_000307	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000401	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000402	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000403	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000404	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000405	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000406	Read and delete DTC	
		IMRR177_R3_VS30_Appl_000407	Read and delete DTC	
	Radar sensor rear right	IMRR177_R1_Appl_000300	Read and delete DTC	
		IMRR177_R1_Appl_000301	Read and delete DTC	
		IMRR177_R1_Appl_000302	Read and delete DTC	
		IMRR177_R1_Appl_000303	Read and delete DTC	
		IMRR177_R1_Appl_000304	Read and delete DTC	
		IMRR177_R1_Appl_000305	Read and delete DTC	
		IMRR177_R1_Appl_000306	Read and delete DTC	
		IMRR177_R1_Appl_000307	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000401	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000402	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000403	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000404	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000405	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000406	Read and delete DTC	
		IMRR177_R1_VS30_Appl_000407	Read and delete DTC	
	Radio/Navigation	Connect907_E005	Read and delete DTC	
		Connect907_E006	Read and delete DTC	
		Connect907_E007	Read and delete DTC	
		Connect907_E008	Read and delete DTC	
		Connect907_E009	Read and delete DTC	
		Connect907_E010	Read and delete DTC	
		HU6_Boot_Entry_Dev	Read and delete DTC	
		HU6_Boot_Entry_Dev	Read and delete DTC	
		HU6_Boot_Entry_Dev	Read and delete DTC	
		HU6_Boot_Entry_Dev	Read and delete DTC	
		HU6_Boot_Entry_Dev	Read and delete DTC	
		HU6_Boot_FreshUp1	Read and delete DTC	
		HU6_Boot_FreshUp2	Read and delete DTC	
		HU6_Boot_Mid_High_	Read and delete DTC	
		HU6_Boot_Mid_High_	Read and delete DTC	
		HU6_Boot_Mid_High_	Read and delete DTC	
		HU6_Boot_Mid_High_	Read and delete DTC	
		HU6_Boot_Mid_High_	Read and delete DTC	
		HU6_Boot_SOP_7	Read and delete DTC	
		HU6_Boot_SOP_11	Read and delete DTC	
		HU6_Entry_Dev	Read and delete DTC	
		HU6_Entry_Dev_2	Read and delete DTC	
		HU6_Entry_Dev_4	Read and delete DTC	
		HU6_Entry_Dev_5	Read and delete DTC	
		HU6_Entry_Dev_6	Read and delete DTC	

		HU6_Entry_FreshUp1	Read and delete DTC	
		HU6_Entry_FreshUp1	Read and delete DTC	
		HU6_Entry_FreshUp1	Read and delete DTC	
		HU6_Entry_FreshUp1	Read and delete DTC	
		HU6_Entry_FreshUp2	Read and delete DTC	
		HU6_Entry_FreshUp2	Read and delete DTC	
		HU6_Entry_FreshUp2	Read and delete DTC	
		HU6_Entry_FreshUp2	Read and delete DTC	
		HU6_Entry_SOP_8	Read and delete DTC	
		HU6_Entry_SOP_9	Read and delete DTC	
		HU6_Entry_SOP_11	Read and delete DTC	
		HU6_High_Dev	Read and delete DTC	
		HU6_High_Dev_2	Read and delete DTC	
		HU6_High_Dev_4	Read and delete DTC	
		HU6_High_Dev_5	Read and delete DTC	
		HU6_High_Dev_6	Read and delete DTC	
		HU6_High_FreshUp1	Read and delete DTC	
		HU6_High_FreshUp1_	Read and delete DTC	
		HU6_High_FreshUp1_	Read and delete DTC	
		HU6_High_FreshUp1_	Read and delete DTC	
		HU6_High_FreshUp2	Read and delete DTC	
		HU6_High_FreshUp2_	Read and delete DTC	
		HU6_High_FreshUp2_	Read and delete DTC	
		HU6_High_FreshUp2_	Read and delete DTC	
		HU6_High_SOP_8	Read and delete DTC	
		HU6_High_SOP_9	Read and delete DTC	
		HU6_High_SOP_11	Read and delete DTC	
		HU6_Mid_Dev	Read and delete DTC	
		HU6_Mid_Dev_2	Read and delete DTC	
		HU6_Mid_Dev_4	Read and delete DTC	
		HU6_Mid_Dev_5	Read and delete DTC	
		HU6_Mid_Dev_6	Read and delete DTC	
		HU6_Mid_FreshUp1	Read and delete DTC	
		HU6_Mid_FreshUp1_1	Read and delete DTC	
		HU6_Mid_FreshUp1_2	Read and delete DTC	
		HU6_Mid_FreshUp1_3	Read and delete DTC	
		HU6_Mid_FreshUp2	Read and delete DTC	
		HU6_Mid_FreshUp2_1	Read and delete DTC	
		HU6_Mid_FreshUp2_2	Read and delete DTC	
		HU6_Mid_FreshUp2_3	Read and delete DTC	
		HU6_Mid_SOP_8	Read and delete DTC	
		HU6_Mid_SOP_9	Read and delete DTC	
		HU6_Mid_SOP_11	Read and delete DTC	
	Rain/light sensor	VCS177_0x000001		
		VCS177_0x000002		
		VCS177_0x000003		
		VCS177_0x000004		
		VCS177_0x000005		
		VCS177_0x000006		
		VCS177_0x000007		
		VCS177_0x000008		
		VCS177_0x000009		
		VCS177_0x00000A		
		VCS177_0x00000B		
		VCS177_0x00000C		
		VCS177_0x00000D		
		VCS177_0x00000E		
		VCS177_0x000106		
		VCS177_0x000107		
		VCS177_0x000108		
		VCS177_0x000109		
		VCS177_0x00010A		
		VCS177_0x00010B		
		VCS177_0x00010C		
		VCS177_0x00010D		
	Tire pressure monitoring system	TPMMFA2_Dev_PAL2_A000	Read and delete DTC	
		TPMMFA2_Dev_PAL2_A001	Read and delete DTC	
		TPMMFA2_Dev_PAL2_A002	Read and delete DTC	
		TPMMFA2_Dev_PAL2_A003	Read and delete DTC	
		TPMMFA2_Dev_PAL2_A004	Read and delete DTC	
		TPMMFA2_Dev_PAL2_A005	Read and delete DTC	
		TPMMFA2_Dev_PAL2_A006	Read and delete DTC	
		TPMMFA2_Ser_PAL2_2000	Read and delete DTC	
		TPMMFA2_Ser_PAL2_2001	Read and delete DTC	
		TPMMFA2_Ser_PAL2_2002	Read and delete DTC	
		TPMMFA2_Ser_PAL2_2003	Read and delete DTC	
	Rear view camera	RVC177_RVC177_000020	Read and delete DTC	
		RVC177_RVC177_000021	Read and delete DTC	
		RVC177_RVC177_000022	Read and delete DTC	
		RVC177_RVC177_000023	Read and delete DTC	

	RVC177_RVC177_000024	Read and delete DTC	
	RVC177_RVC177_000025	Read and delete DTC	
	RVC177_RVC177_000026	Read and delete DTC	
	RVC177_RVC177_008400	Read and delete DTC	
	RVC177_RVC177_008401	Read and delete DTC	
	RVC177_RVC177_008402	Read and delete DTC	
	RVC177_RVC177_008403	Read and delete DTC	
	RVC177_RVC177_008404	Read and delete DTC	
	RVC177_RVC177_008405	Read and delete DTC	
	RVC177_RVC177_008406	Read and delete DTC	
Headlamp electronics, left	HLI_FL247_BR177_IBN_DK20	Read and delete DTC	
	HLI_FL247_BR177_LAB1_DK20	Read and delete DTC	
	HLI_FL247_BR177_R1_DK21	Read and delete DTC	
	HLI_FL247_BR177_R2_DK23	Read and delete DTC	
	HLI_FL247_BR177_R3_DK24	Read and delete DTC	
	HLI_FL247_BR177_R4_DK25	Read and delete DTC	
	HLI_FL247_BR177_R5_DK26	Read and delete DTC	
	HLI_FL247_BR177_R6_DK27	Read and delete DTC	
	HLI_FL247_BR177_R7_DK28	Read and delete DTC	
	HLI_FL247_BR177_R7_1_DK29	Read and delete DTC	
	HLI_FL247_BR213M_R2_DK10	Read and delete DTC	
Headlamp electronics, right	HLI_FR247_BR177_IBN_DK20	Read and delete DTC	
	HLI_FR247_BR177_LAB1_DK20	Read and delete DTC	
	HLI_FR247_BR177_R1_DK21	Read and delete DTC	
	HLI_FR247_BR177_R2_DK23	Read and delete DTC	
	HLI_FR247_BR177_R3_DK24	Read and delete DTC	
	HLI_FR247_BR177_R4_DK25	Read and delete DTC	
	HLI_FR247_BR177_R5_DK26	Read and delete DTC	
	HLI_FR247_BR177_R6_DK27	Read and delete DTC	
	HLI_FR247_BR177_R7_DK28	Read and delete DTC	
	HLI_FR247_BR177_R7_1_DK29	Read and delete DTC	
	HLI_FR247_BR213M_R2_DK10	Read and delete DTC	
Power steering	EPS167_4400	Read and delete DTC	
	EPS167_4401	Read and delete DTC	
	EPS167_4402	Read and delete DTC	
	EPS167_4403	Read and delete DTC	
	EPS167_4404	Read and delete DTC	
	EPS167_4405	Read and delete DTC	
	EPS167_4406	Read and delete DTC	
	EPS167_C400	Read and delete DTC	
	EPS167_C401	Read and delete DTC	
	EPS167_C402	Read and delete DTC	
	EPS167_C403	Read and delete DTC	
	EPS167_C404	Read and delete DTC	
	EPS167_C405	Read and delete DTC	
	EPS167_C406	Read and delete DTC	
Seat electronics front left	SEATD167_Lab1_008100	Read and delete DTC	
	SEATD167_Rel1_008101	Read and delete DTC	
	SEATD167_Rel2_008102	Read and delete DTC	
	SEATD167_Rel3_008103	Read and delete DTC	
	SEATD167_Rel4_008104	Read and delete DTC	
	SEATD167_Rel5_008105	Read and delete DTC	
	SEATD167_Rel6_008106	Read and delete DTC	
	SEATD167_Rel7_000107	Read and delete DTC	
	SEATD167_Rel8_000108	Read and delete DTC	
	SEATD167_Rel9_000109	Read and delete DTC	
	SEATD167_Rel10_00010A	Read and delete DTC	
	SEATD167_Rel11_00010B	Read and delete DTC	
Seat electronics front right	SEATP167_Lab1_008100	Read and delete DTC	
	SEATP167_Rel1_008101	Read and delete DTC	
	SEATP167_Rel2_008102	Read and delete DTC	
	SEATP167_Rel3_008103	Read and delete DTC	
	SEATP167_Rel4_008104	Read and delete DTC	
	SEATP167_Rel5_008105	Read and delete DTC	
	SEATP167_Rel6_008106	Read and delete DTC	
	SEATP167_Rel7_000107	Read and delete DTC	
	SEATP167_Rel8_000108	Read and delete DTC	
	SEATP167_Rel9_000109	Read and delete DTC	
	SEATP167_Rel10_00010A	Read and delete DTC	
	SEATP167_Rel11_00010B	Read and delete DTC	
Seat heating electronics front left	SHM_FL205_BR_167_R3_8201		
	SHM_FL205_BR_167_R6_0202		
	SHM_FL205_BR_213		
	SHM_FL205_BR_213_R4_8101		
	SHM_FL205_BR_213_R7_0100		
	SHM_FL205_BR_213_R7_1_0101		
	SHM_FL205_BR_222_205_Gen1_5_0301		
	SHM_FL205_E_0001		
	SHM_FL205_E_0005		
	SHM_FL205_E_0006_8003		
	SHM_FL205_E_0007		

		SHM_FL205_E_0010_8006		
		SHM_FL205_E_0011_0000		
		SHM_FL205_MOPF222_R10_0102		
		SHM_FL205_MOPF222_R14_0103		
		SHM_FL205_R19_1_0001		
	Seat heating electronics front right	SHM_FR205_BR_167_R3_8201		
		SHM_FR205_BR_167_R6_0202		
		SHM_FR205_BR_213		
		SHM_FR205_BR_213_R4_8101		
		SHM_FR205_BR_213_R4_8101_1		
		SHM_FR205_BR_213_R7_0100		
		SHM_FR205_BR_213_R7_1_0101		
		SHM_FR205_BR_222_205_Gen1_5_0301		
		SHM_FR205_E_0001		
		SHM_FR205_E_0005		
		SHM_FR205_E_0006_8003		
		SHM_FR205_E_0007		
		SHM_FR205_E_0010_8006		
		SHM_FR205_E_0011_0000		
		SHM_FR205_MOPF222_R10_0102		
		SHM_FR205_MOPF222_R14_0103		
		SHM_FR205_R19_1_0001		
	Special function electronics	MPM907_B1_0_Muster	Read and delete DTC	
		MPM907_B1_1_Muster	Read and delete DTC	
		MPM907_B2_0_Muster	Read and delete DTC	
		MPM907_B2_1_Muster	Read and delete DTC	
		MPM907_SW_Rel_5_0	Read and delete DTC	
		MPM907_SW_Rel_6_0	Read and delete DTC	
		MPM907_SW_Rel7_0	Read and delete DTC	
	Telephone module	WMI6_no_TelAnt_00	Read and delete DTC	
		WMI6_no_TelAnt_01	Read and delete DTC	
		WMI6_00	Read and delete DTC	
		WMI6_01	Read and delete DTC	
	Telematics	HERMES_Hermes_Gen_1_5_4	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_1_0	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_1_1	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_1_2	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_1_3	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_2_4	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_2_5	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_2_6	Read and delete DTC	
			Measurements	
		HERMES_Hermes_Gen_21_0	Read and delete DTC	
			Measurements	
	Selector lever module	DSM222_0001	Read and delete DTC	
		DSM222_0002	Read and delete DTC	
		DSM222_0003	Read and delete DTC	
		DSM222_0004	Read and delete DTC	
		DSM222_0005	Read and delete DTC	
		DSM222_8001	Read and delete DTC	
		DSM222_8002	Read and delete DTC	
	Central electronics	BCMFA2_R_1	Read and delete DTC	
		BCMFA2_R_2	Read and delete DTC	
		BCMFA2_R_3	Read and delete DTC	
		BCMFA2_R_4	Read and delete DTC	
		BCMFA2_R_5	Read and delete DTC	
		BCMFA2_R_6	Read and delete DTC	
		BCMFA2_R_7	Read and delete DTC	
		BCMFA2_R_7_1	Read and delete DTC	
		BCMFA2_R_8;	Read and delete DTC	
		BCMFA2_R_8_1	Read and delete DTC	
		BCMFA2_R_9	Read and delete DTC	
		BCMFA2_R_A2	Read and delete DTC	
		BCMFA2_R_B_IBN_Int_1	Read and delete DTC	
		BCMFA2_R_LAB_1	Read and delete DTC	
		BCMFA2_R_10	Read and delete DTC	
		BCMFA2_R_11	Read and delete DTC	
		BCMFA2_R_12	Read and delete DTC	
		BCMFA2_R_13	Read and delete DTC	
		BCMFA2_R_14	Read and delete DTC	
Opel				
Astra K	Engine electronics	3F02	Read and delete DTC	
			Measurements	
Astra J	Engine electronics	3F0D	Read and delete DTC	

		0A3B	Measurements Read and delete DTC		
		0C1A	Measurements Read and delete DTC		
Insignia B	Engine electronics	3F0F	Measurements Read and delete DTC		
Zafira C	Engine electronics	3F0D	Measurements Read and delete DTC		
Renault					
Captur	Parking aid	11293	Measurements Read and delete DTC		
Clio 4	Additive control	11725	Measurements Read and delete DTC		
		11293	Measurements Read and delete DTC		
Espace 5	Additive control	11725	Measurements Read and delete DTC		
		11304	Measurements Read and delete DTC		
	All-wheel steering	11796	Measurements Read and delete DTC		
		11293	Measurements Read and delete DTC		
	Parking aid	11327	Measurements Read and delete DTC	Maintenance mode	
	Parking brake	11268	Measurements Read and delete DTC		
	Front camera	11300	Measurements Read and delete DTC		
		11547	Measurements Read and delete DTC		
		11850	Measurements Read and delete DTC		
		11321	Measurements Read and delete DTC		
		11320	Measurements Read and delete DTC		
	Power steering	11506	Measurements Read and delete DTC		
		11593	Measurements Read and delete DTC		
		11662	Measurements Read and delete DTC		
		11295	Measurements Read and delete DTC		
		11535	Measurements Read and delete DTC		
	Central electronics passenger compartment	11341	Measurements Read and delete DTC		
11341		Measurements Read and delete DTC			
Kadjar	Additive control	11725	Measurements Read and delete DTC		
		11293	Measurements Read and delete DTC		
	Parking brake	11327	Measurements Read and delete DTC	Maintenance mode	
	Front camera	11268	Measurements Read and delete DTC		
		11300	Measurements Read and delete DTC		
	Navigation system	11547	Measurements Read and delete DTC		
		11850	Measurements Read and delete DTC		
		11391	Measurements Read and delete DTC		
	Power steering	11506	Measurements Read and delete DTC		
		11593	Measurements Read and delete DTC		
		11662	Measurements Read and delete DTC		
		11295	Measurements Read and delete DTC		
		11535	Measurements Read and delete DTC		
	Central electronics, engine compartment	11341	Measurements Read and delete DTC		
		11341	Measurements Read and delete DTC		
	Kangoo 2	Additive control	11725	Measurements Read and delete DTC	
			11725	Measurements Read and delete DTC	
Koleos 2	Additive control	11725	Measurements Read and delete DTC		

			Measurements		
	Parking aid	11293	Read and delete DTC Measurements	Maintenance mode	
	Parking brake	11327	Read and delete DTC Measurements		
	Navigation system	11300	Read and delete DTC Measurements		
		11547	Read and delete DTC Measurements		
		11850	Read and delete DTC Measurements		
	Power steering	11391	Read and delete DTC Measurements		
	Central electronics passenger compartment	11506	Read and delete DTC Measurements		
		11593	Read and delete DTC Measurements		
		11662	Read and delete DTC Measurements		
		11295	Read and delete DTC Measurements		
		11535	Read and delete DTC Measurements		
	Central electronics, engine compartment	11341	Read and delete DTC Measurements		
Master 3	Additive control	11725	Read and delete DTC Measurements		
Megane 4	Additive control	11725	Read and delete DTC Measurements		
	All-wheel steering	11304	Read and delete DTC Measurements		
		11796	Read and delete DTC Measurements		
	DC/DC converter	11484	Read and delete DTC Measurements		
	Parking aid	11293	Read and delete DTC Measurements		
	parking brake	11327	Read and delete DTC Measurements	Maintenance mode	
	High-voltage battery-charging management	11486	Read and delete DTC Measurements		
	High-voltage battery-charging management 2	11487	Read and delete DTC		
	Front camera	11268	Read and delete DTC Measurements		
	Communication electronics	11731	Read and delete DTC Measurements		
	Navigation system	11300	Read and delete DTC Measurements		
		11547	Read and delete DTC Measurements		
		11850	Read and delete DTC Measurements		
	Radar sensor front	11321	Read and delete DTC Measurements		
	Power steering	11320	Read and delete DTC Measurements		
		11319	Read and delete DTC Measurements		
	Seat electronics front left	11440	Read and delete DTC Measurements		
	Seat electronics front right	11439	Read and delete DTC Measurements		
		11485	Read and delete DTC Measurements		
	Central electronics passenger compartment	11506	Read and delete DTC Measurements		
		11593	Read and delete DTC Measurements		
		11662	Read and delete DTC Measurements		
		11295	Read and delete DTC Measurements		
		11535	Read and delete DTC Measurements		
	Central electronics, engine compartment	11341	Read and delete DTC Measurements		
	Scenic 4	Additive control	11725	Read and delete DTC Measurements	

	DC/DC converter	11484	Read and delete DTC Measurements	
	Parking aid	11293	Read and delete DTC Measurements	
	parking brake	11327	Read and delete DTC Measurements	Maintenance mode
	High-voltage battery-charging management	11486	Read and delete DTC Measurements	
	High-voltage battery-charging management 2	11487	Read and delete DTC	
	Navigation system	11300	Read and delete DTC Measurements	
		11547	Read and delete DTC Measurements	
		11850	Read and delete DTC Measurements	
	Power steering	11320	Read and delete DTC Measurements	
	Seat electronics front left	11440	Read and delete DTC Measurements	
	Seat electronics front right	11439	Read and delete DTC Measurements	
	Starter Generator	11485	Read and delete DTC Measurements	
	Central electronics passenger compartment	11506	Read and delete DTC Measurements	
		11593	Read and delete DTC Measurements	
		11662	Read and delete DTC Measurements	
		11295	Read and delete DTC Measurements	
		11535	Read and delete DTC Measurements	
	Central electronics, engine compartment	11341	Read and delete DTC Measurements	
Talisman	Additive control	11725	Read and delete DTC Measurements	
	All-wheel steering	11304	Read and delete DTC Measurements	
		11796	Read and delete DTC Measurements	
	Parking aid	11293	Read and delete DTC Measurements	
	parking brake	11327	Read and delete DTC Measurements	Maintenance mode
	Front camera	11268	Read and delete DTC Measurements	
	Navigation system	11300	Read and delete DTC Measurements	
		11547	Read and delete DTC Measurements	
		11850	Read and delete DTC Measurements	
	Radar sensor front	11321	Read and delete DTC Measurements	
	Power steering	11320	Read and delete DTC Measurements	
	Seat electronics front left	11440	Read and delete DTC Measurements	
	Seat electronics front right	11439	Read and delete DTC Measurements	
	Central electronics passenger compartment	11506	Read and delete DTC Measurements	
		11593	Read and delete DTC Measurements	
		11662	Read and delete DTC Measurements	
		11295	Read and delete DTC Measurements	
11535		Read and delete DTC Measurements		
Central electronics, engine compartment	11341	Read and delete DTC Measurements		
Trafic 3	Additive control	11725	Read and delete DTC Measurements	
Smart				
Forfour 453	Traction battery	BMS453_Variant_001500	Read and delete DTC Measurements	
		BMS453_Variant_002000	Read and delete DTC Measurements	
		BMS453_Variant_003000	Read and delete DTC	

		BMS453_Variant_004000	Measurements Read and delete DTC Measurements	
		BMS453_Variant_004600	Read and delete DTC Measurements	
		BMS453_Variant_004700	Read and delete DTC Measurements	
Fortwo 453	Traction battery	BMS453_Variant_001500	Read and delete DTC Measurements	
		BMS453_Variant_002000	Read and delete DTC Measurements	
		BMS453_Variant_003000	Read and delete DTC Measurements	
		BMS453_Variant_004000	Read and delete DTC Measurements	
		BMS453_Variant_004600	Read and delete DTC Measurements	
		BMS453_Variant_004700	Read and delete DTC Measurements	

Copyright © 2020 AVL DiTEST GMBH, all rights reserved.